




Genuine Spare Parts

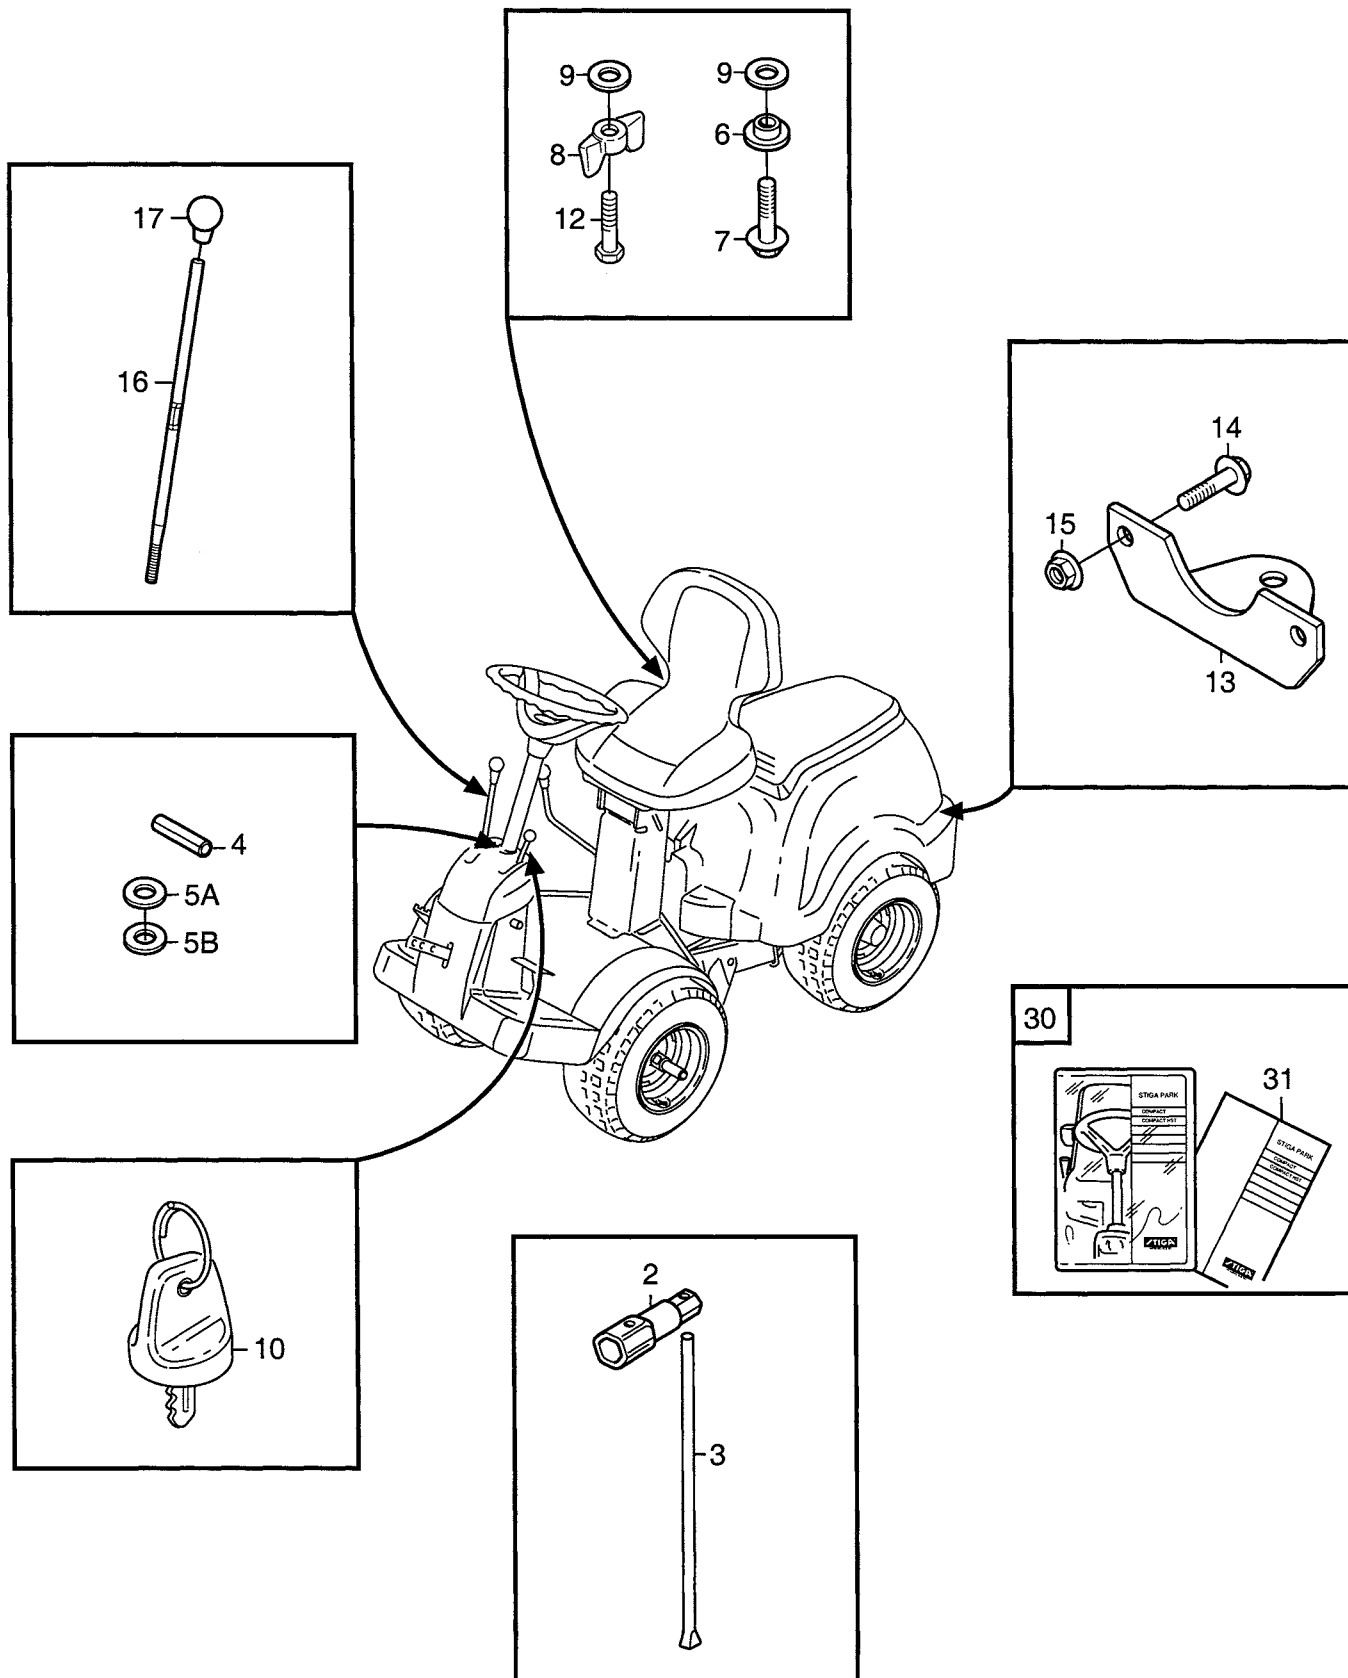


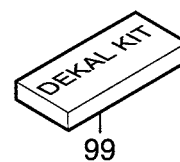




Utgåva Issue		Bildnr Picture No		PARK COMPACT MONTERINGSDETALJER		PARK COMPACT ASSEMBLY PARTS		Sida Page	
2005- 11		1638A						2	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6101	6102 6103							
0		1			1134-4249-05	Monteringsdetaljer.....	Assembly parts		Inkl. pos 1 - 15
0	1				1134-4249-06	Monteringsdetaljer.....	Assembly parts		Inkl. pos 1 - 17
2	1	1			1134-4541-01	• Tändstiftshylsa	• Spark plug wrench		5/8" (16 mm)/21 mm
3	1	1			1111-2113-01	• Vridpinne	• Rod		
4	1	1			9595-0262-00	• Spännstift	• Locating pin		
5A	1	1			9699-0103-02	• Shims	• Flat washer		0.5 mm
5B	1	1			9699-0114-02	• Shims	• Flat washer		1.0 mm
6	2	2			1134-4185-01	• Ansatsbricka	• Flange washer		
7	2	2			9959-0820-16	• Skruv	• Screw		
8	2	2			1134-4481-01	• Vingmutter.....	• Wing nut		
9	4	4			9699-0056-02	• Planbricka.....	• Flat washer		
10	2	2			1134-4734-01	• Tändningsnyckel.....	• Ignition key		
12	2	2			9997-0820-16	• Skruv	• Screw		
13	1	1			1134-5512-01	• Dragplåt.....	• Towing plate.....		
14	2	2			9959-0820-16	• Skruv	• Screw		
15	2	2			9739-0831-22	• Mutter.....	• Nut		
16	1				1134-5482-01	• Växelspak	• Gear shift lever		
17	1				1134-2551-01	• Reglageknopp.....	• Knob		
30	1	1			1134-3771-72	Mapp m.trycksaker	Folder w.manuals		
31	1	1			8211-0209-12	• Säkerhetsföreskrifter	• Safety regulations		
31	1	1			8211-0542-01	• Servicebok.....	• Service book		
31	1	1			8211-1024-01	• Monteringsanvisning	• Assembly instructions.....		
31	1	1			8211-1031-01	• Bruksanvisning	• Owner's manual		
31	1	1			8211-1032-01	• Bruksanvisning	• Owner's manual		
31	1	1			8211-2002-03	• Garantikort.....	• Warranty card		

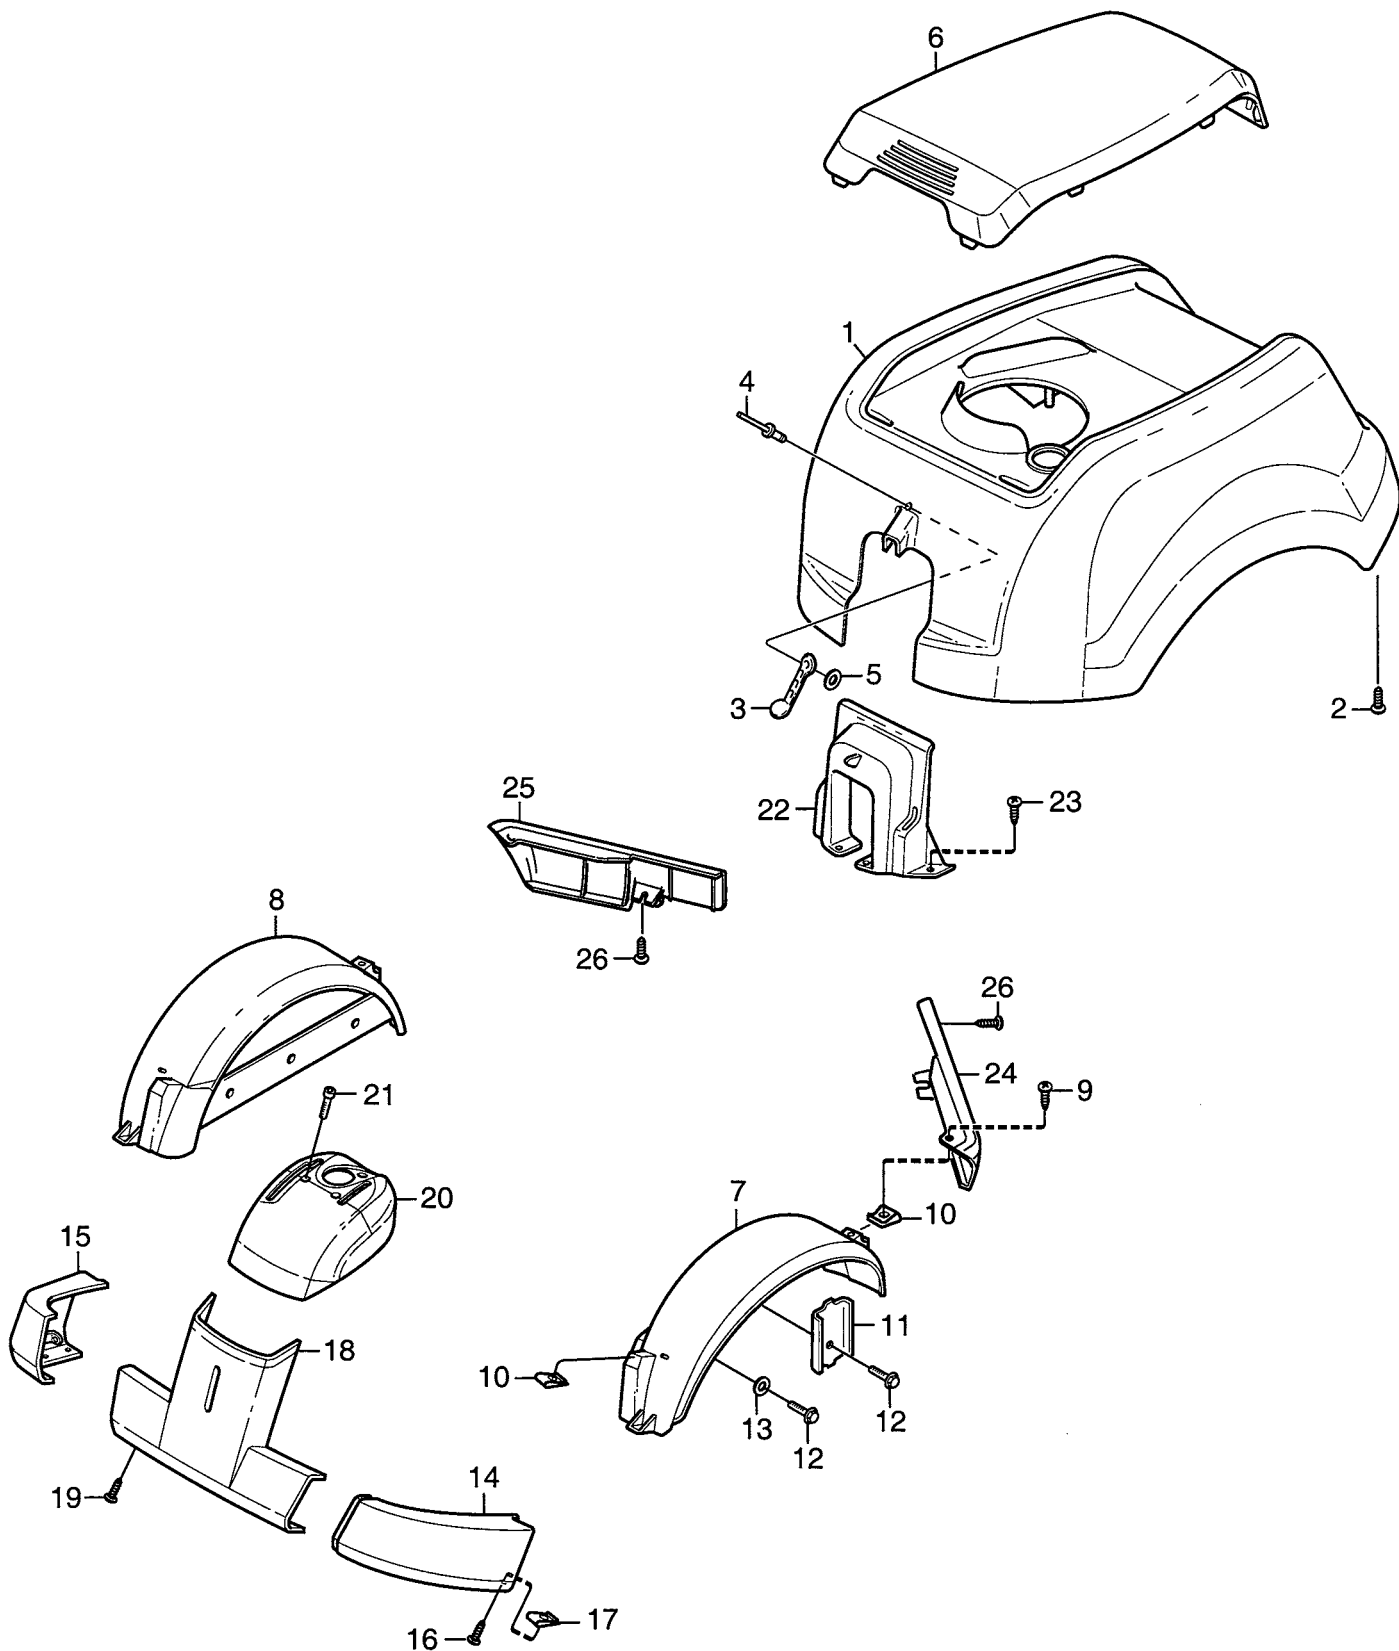


Utgåva Issue		Bildnr Picture No		PARK COMPACT KAROSS		PARK COMPACT BODY WORK		Sida Page
2005- 11		1658						4
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6101	6102 6103						
1	1	1		1134-5263-02	Motorhuv- gul	Engine hood- yellow		Sats 3 st/kit of 3
2	7	7		9838-9530-12	Skruv	Screw		
3	1	1		1134-9028-01	Gummistropp- sats	Rubber strap kit		
4	1	1		9632-0516-00	Popnit	Pop rivet		
5	1	1		9699-0120-02	Bricka	Washer		
6	1	1		1134-5264-01	Motorlucka- grå	Engine cover- grey		
7	1	1		1134-5308-01	Stänkskärm vä- grå	Mud guard LH- grey		
8	1	1		1134-5308-02	Stänkskärm hö- grå	Mud guard RH- grey		
9	4	4		9893-0616-16	Skruv	Screw		
10	4	4		1134-4176-01	Clips	Clips		
11	2	2		1134-0225-00	Stödplåt	Support plate		
12	6	6		9945-0816-16	Skruv	Screw		
13	4	4		9699-0056-02	Planbricka	Flat washer		
14	1	1		1134-5306-01	Stötfångare, front- vä	Bumper, front- LH		
15	1	1		1134-5306-02	Stötfångare, front- hö	Bumper, front- RH		
16	4	4		9893-0616-16	Skruv	Screw		
17	2	2		1134-4176-01	Clips	Clips		
18	1	1		1134-5305-01	Front- nedre	Front plate- lower		
19	2	2		9893-0616-16	Skruv	Screw		
20	1			1134-5320-01	Front- övre	Front- upper		
20		1		1134-5320-02	Front- övre	Front- upper		
21	2	2		9946-0525-16	Skruv	Screw		
22	1	1		1134-5265-01	Huvstöd	Hood support		
23	4	4		9893-0616-16	Skruv	Screw		
24	1	1		1134-3970-05	Kantlist- vä, grå	Moulding- LH, grey		
25	1	1		1134-3970-02	Kantlist- hö, grå	Moulding- RH, grey		
26	2	2		9893-0616-16	Skruv	Screw		
99	1			1134-5592-01	Dekalsats	Label kit		
99		1		1134-5592-02	Dekalsats	Label kit		

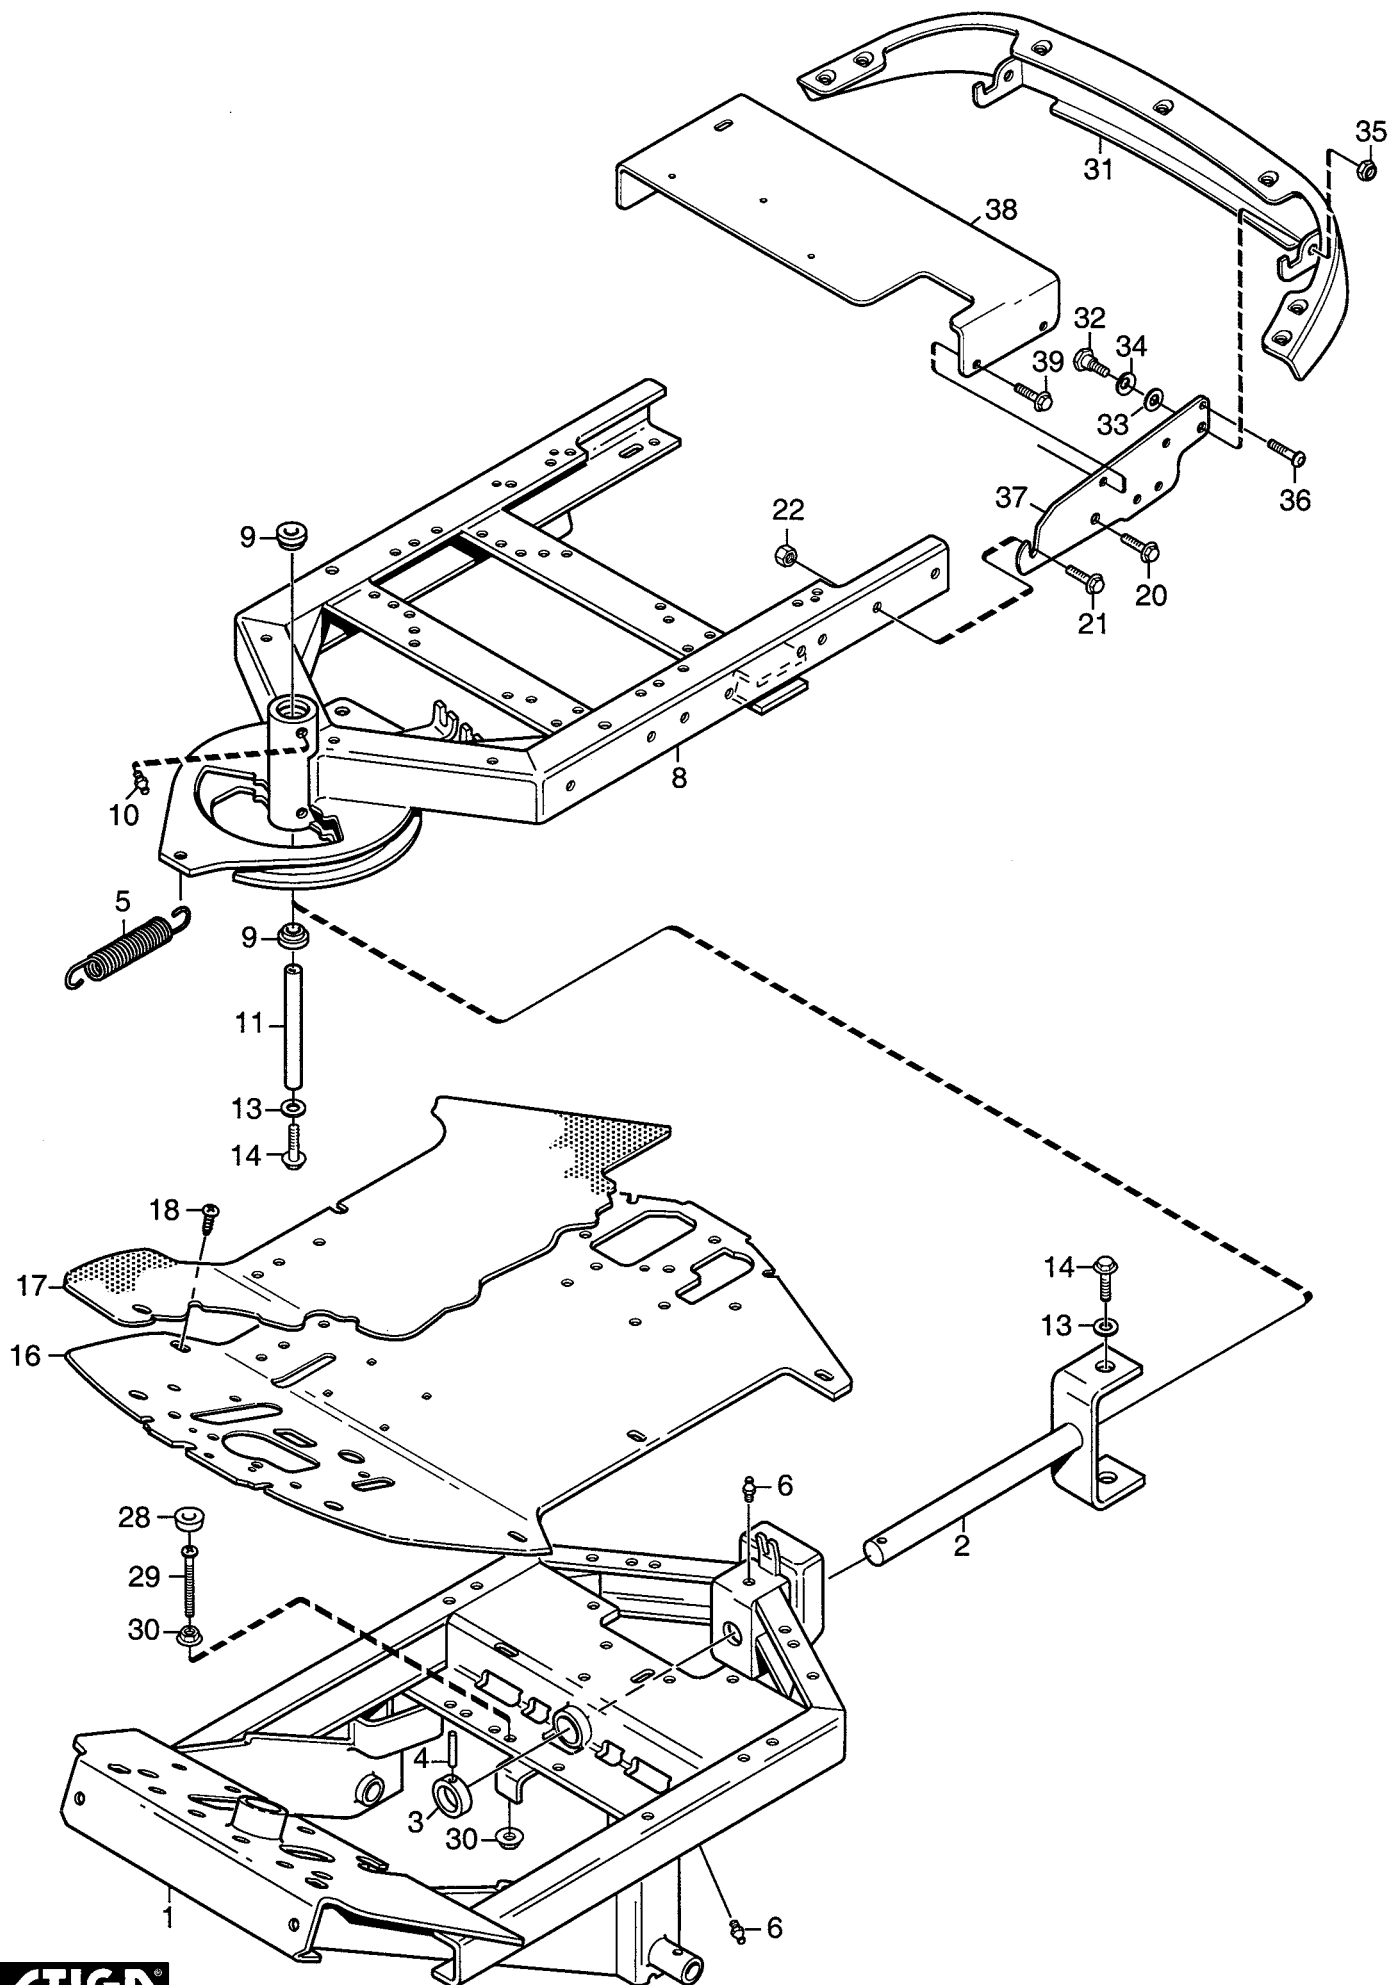


Utgåva Issue		Bildnr Picture No		PARK COMPACT RAM		PARK COMPACT FRAME		Sida Page	
2005- 11		1669A						6	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6101	6102 6103							
1	1	1			1134-5315-02	Ram- främre	Frame- front		
2	1	1			1134-3963-02	• Midjegaffel	• Clevis		
3	1	1			1134-0031-00	• Ledaxelstopp	• Pivot shaft stop		
4	1	1			9595-0262-00	• Spännstift	• Locating pin		
5	1	1			1134-2171-01	Fjäder	Spring		
6	2	2			9501-0500-00	Smörjnippel	Grease joint		
8	1	1			1134-5313-01	Ram- bakre	Frame- rear		- 050227
8	1	1			1134-5870-01	Ram- bakre	Frame- rear		050228 -
9	2	2			9547-0001-00	• Ledlager	• Bearing		
10	2	2			9501-0500-00	Smörjnippel	Grease joint		
11	1	1			1134-3968-02	Centrumaxel (188 mm)	Centre shaft (188 mm)		- 050227
11	1	1			1134-3968-03	Centrumaxel (185 mm)	Centre shaft (185 mm)		050228 -
13	2	2			9699-0035-02	Planbricka	Flat washer		
14	2	2			9959-1020-16	Skruv	Screw		
16	1	1			1134-5294-01	Durk	Floor plate		
17	1				1134-5513-01	Durkmatta	Floor mat		
17		1			1134-5514-01	Durkmatta	Floor mat		
18	2	2			9893-0616-16	Skruv	Screw		
20	2	2			9945-0816-16	Skruv	Screw		
21	2	2			9959-0820-16	Skruv	Screw		
22	2	2			9739-0831-22	Mutter	Nut		
28	1	1			1134-4975-01	Gummibuffert	Rubber block		
29	1	1			9950-0570-12	Skruv	Screw		
30	2	2			9739-0531-22	Mutter	Nut		
31	1	1			1134-5337-01	Stötfångare- bak	Bumper- rear		
32	2	2			1134-0240-00	Ansattsskruv	Shoulder screw		
33	2	2			1134-4242-01	Distansbricka	Spacer washer		
34	2	2			9665-0002-00	Brickfjäder	Bowed washer		
35	2	2			9747-0831-02	Mutter	Lock nut		
36	2	2			9943-0516-16	Skruv	Screw		
37	2	2			1134-5345-01	Stag	Attachment		
38	1	1			1134-5344-01	Batterihylla	Battery shelf		
39	4	4			9945-0816-16	Skruv	Screw		

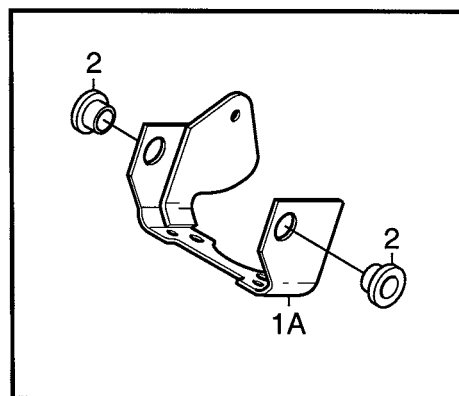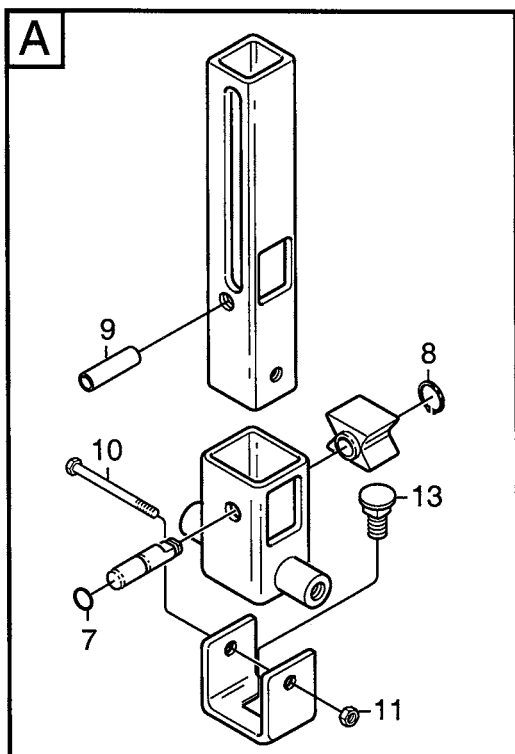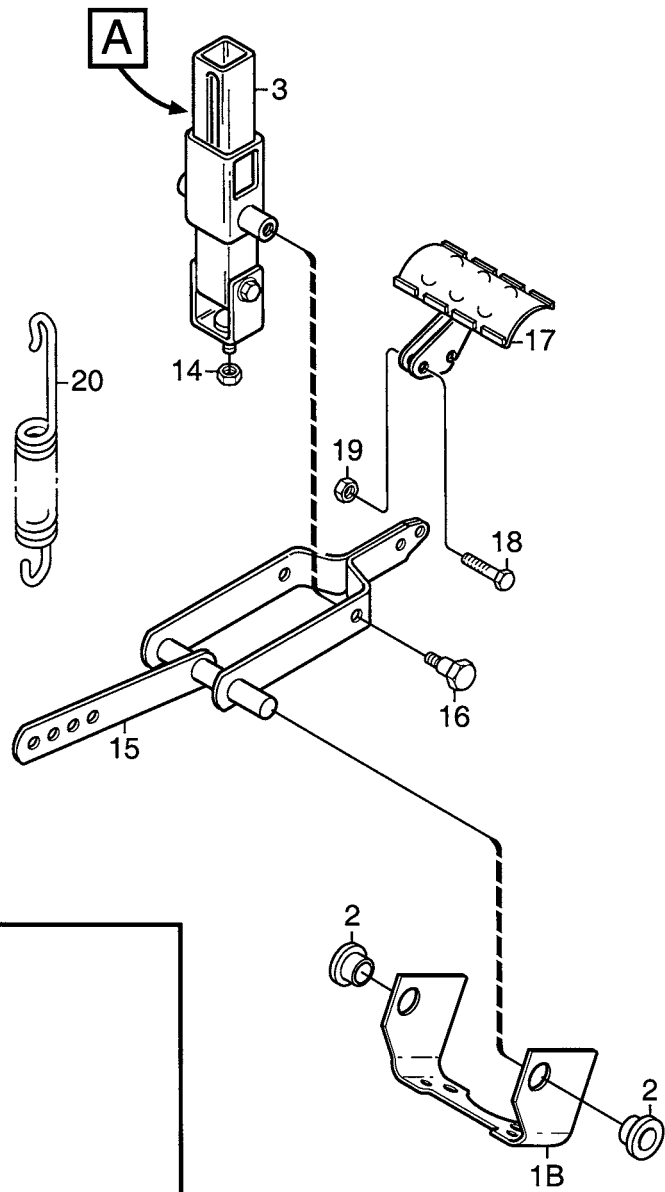


Utgåva Issue		Bildnr Picture No		PARK COMPACT PEDALLYFT		PARK COMPACT PEDAL LIFT		Sida Page	
2005- 11		1656						8	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6101	6102 6103							
1 A	1				1134-5462-01	Fäste	Bracket		
1 B		1			1134-4117-01	Fäste	Bracket		
2	2	2			1134-2684-01	Lager	Bearing		
3	1	1			1134-4945-01	Lyftspärr kpl	Lift catch assy		
7	1	1			9404-0027-01	• O- ring	• O- ring		
8	1	1			9650-0039-04	• Seegersäkring	• Lock ring		
9	1	1			9595-0276-01	• Spännstift	• Locating pin		
10	1	1			9997-0640-12	• Skruv	• Screw		
11	1	1			9747-0631-02	• Låsmutter	• Lock nut		
13	1	1			9897-0820-16	• Skruv	• Screw		
14	1	1			9747-0831-02	Mutter	Lock nut		
15	1	1			1134-4860-01	Lyftgaffel	Lift fork		
16	2	2			1134-0240-00	Ansattsskruv	Shoulder screw		
17	1	1			1134-4938-01	Lyftpedal	Lift pedal		
18	2	2			9997-0625-16	Skruv	Screw		
19	2	2			9739-0631-22	Mutter	Nut		
20	1	1			4231-0013-00	Fjäder	Spring		

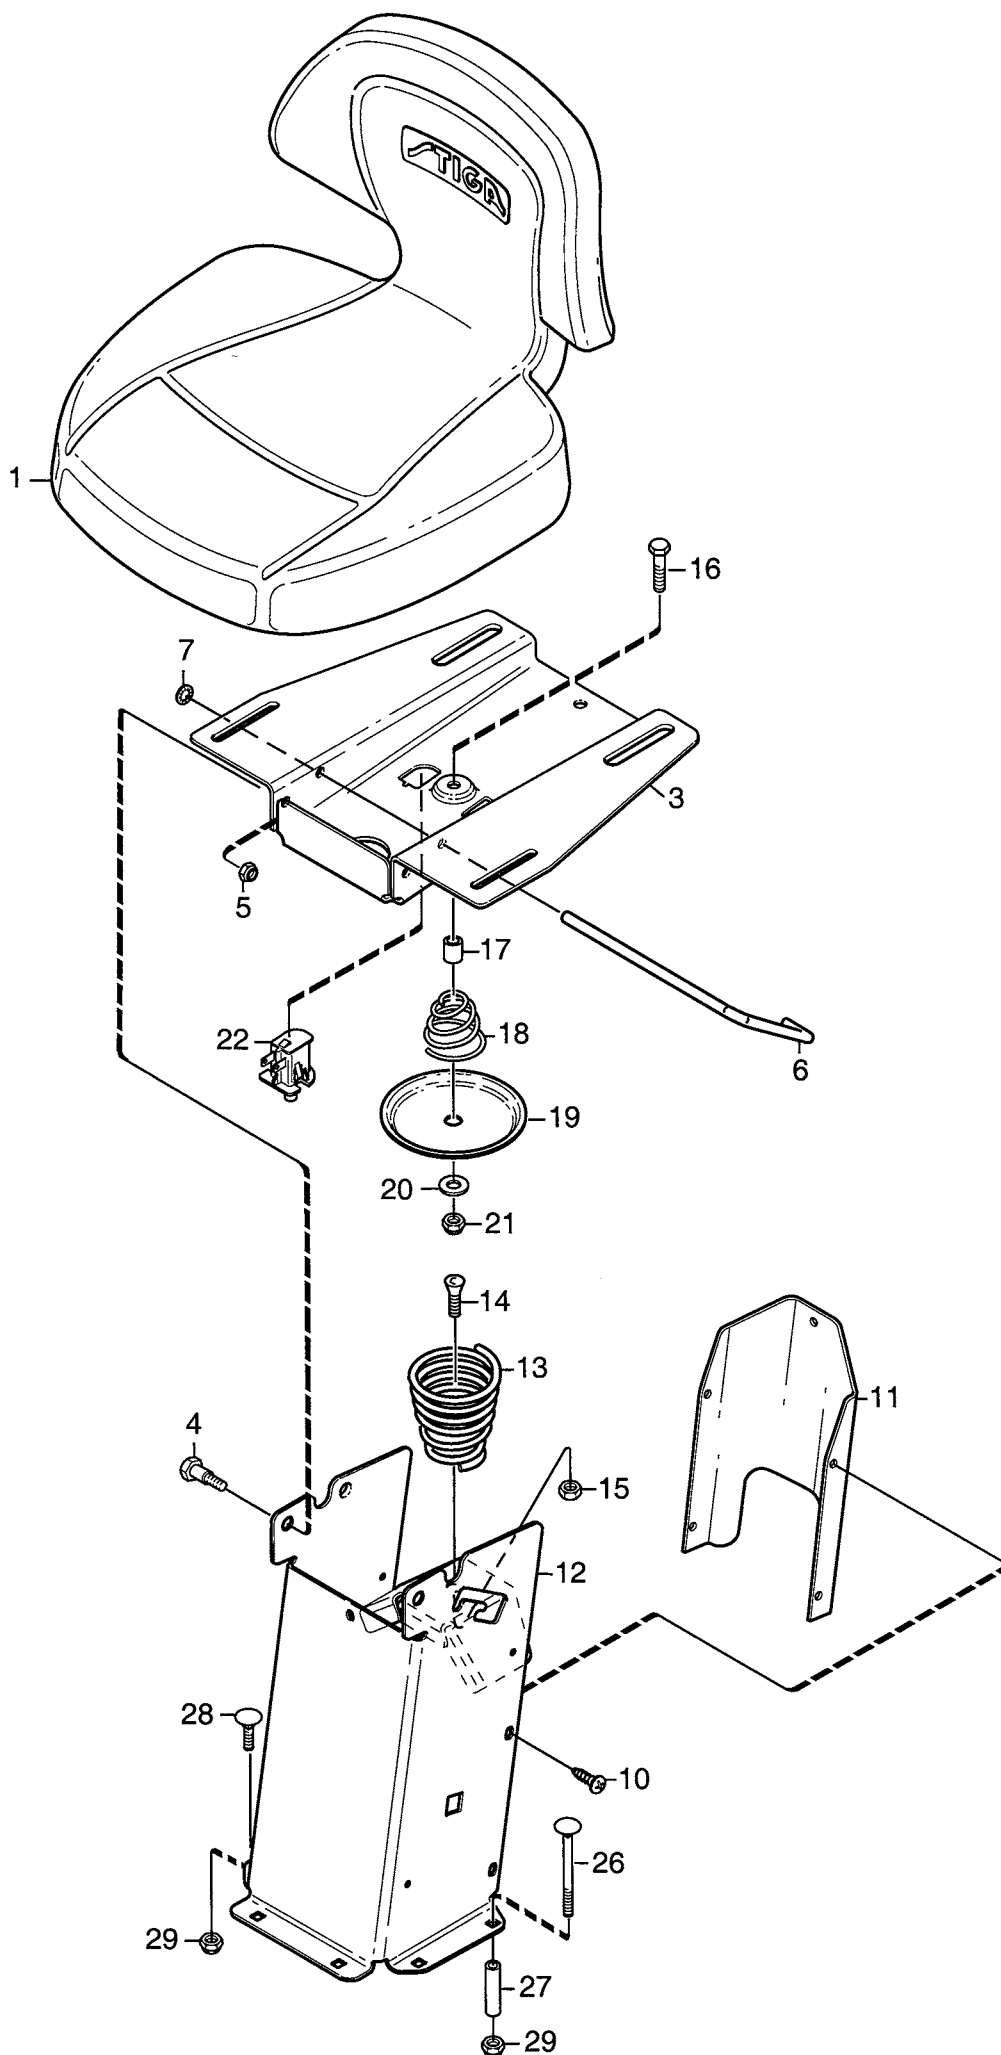


Utgåva Issue		Bildnr Picture No		PARK COMPACT SITS		PARK COMPACT SEAT		Sida Page
2005- 11		1657						10
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6101 6102 6103							
1	1			1134-5506-01	Sits	Seat		
3	1			1134-5301-01	Sitsplatta	Seat plate		
4	2			1134-0240-00	Ansätsskruv	Shoulder screw		
5	2			9747-0831-02	Mutter	Lock nut		
6	1			1134-5454-01	Spärr	Catch		
7	1			9675-0012-02	Starlock	Locking washer		
10	4			9893-0616-16	Skruv	Screw		
11	1			1134-5300-01	Bakstycke	Rear plate		
12	1			1134-5296-04	Sitskonsol- gul	Seat bracket- yellow		
13	1			1134-4256-01	Sitsfjäder	Seat spring		
14	1			9924-1230-19	Skruv	Screw		
15	1			9747-1231-02	Låsmutter	Lock nut		
16	1			9997-0840-16	Skruv	Screw		
17	1			1134-1565-06	Distans	Spacer		
18	1			1134-5302-01	Fjäder	Spring		
19	1			1134-5299-01	Tryckplatta	Push plate		
20	1			9699-0090-02	Planbricka	Flat washer		
21	1			9747-0831-02	Mutter	Lock nut		
22	1			1134-3156-02	Brytare	Switch		
26	2			9897-0880-12	Skruv	Screw		L = 80 mm
27	2			1134-1565-08	Distans	Spacer		
28	4			9897-0820-16	Skruv	Screw		L = 20 mm
29	6			9747-0831-02	Mutter	Lock nut		

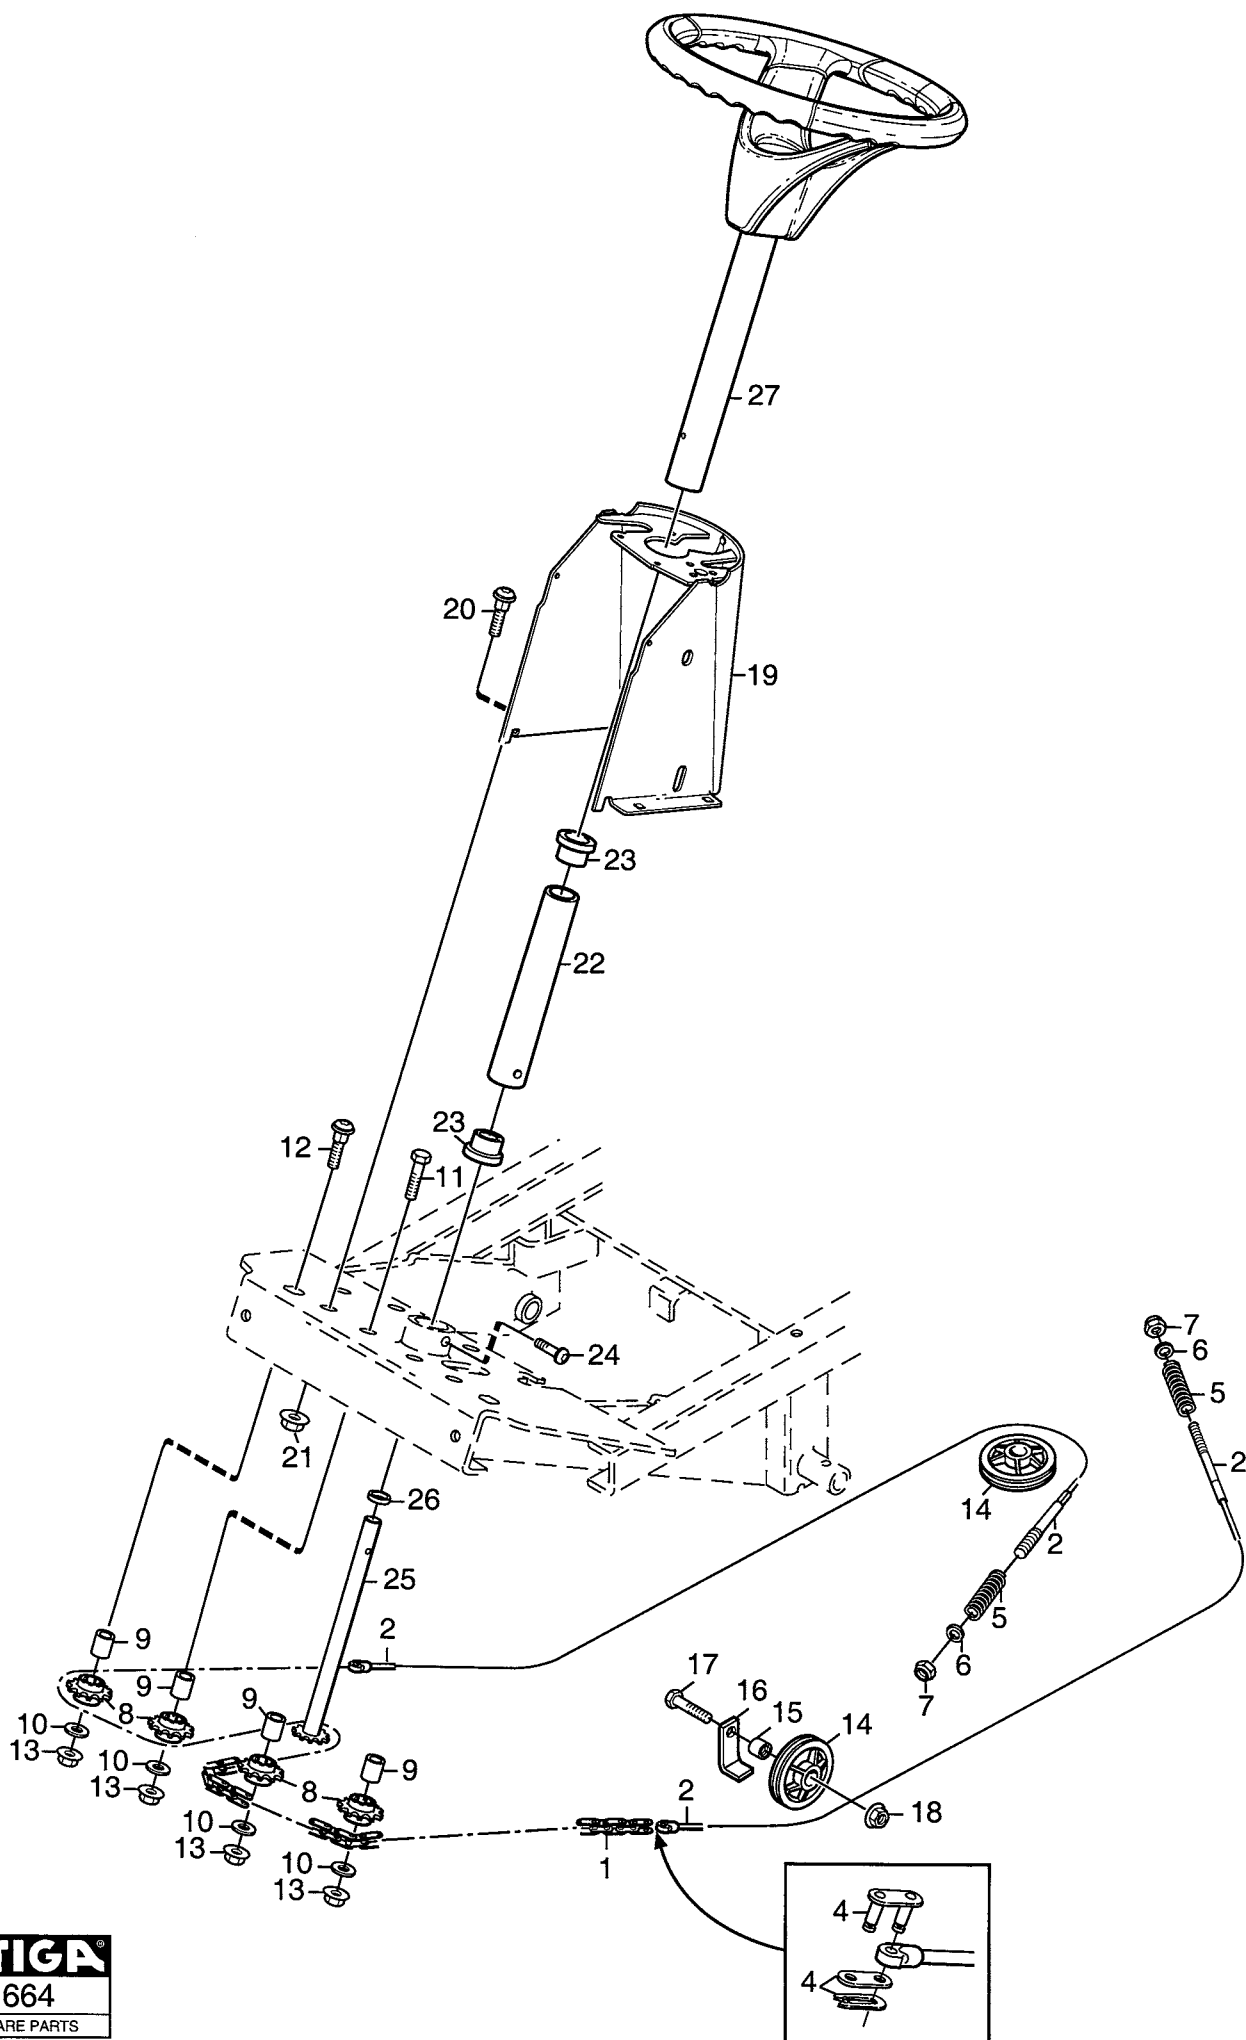


Utgåva Issue		Bildnr Picture No		PARK COMPACT STYRNING		PARK COMPACT STEERING		Sida Page	
2005- 11		1664						12	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	6101 6102 6103								
1	1			1134-2820-06	Kedja	Chain		83 länk	
2	1			1134-9084-01	Styrwire kpl (vå+hö)	Steering cable assy		Sats vå+hö/kit l+r	
4	2			1134-2824-01	Kedjelås	Chain lock			
5	2			1134-3817-01	Tryckfjäder	Compression spring			
6	2			9699-0090-02	Planbricka	Flat washer			
7	2			9747-0831-02	Mutter	Lock nut			
8	4			1134-2816-01	Kedjehjul	Sprocket			
9	4			1134-0041-02	Linhjulshylsa	Idler wheel bush			
10	4			9699-0035-02	Planbricka	Flat washer			
11	2			9997-1050-16	Skruv	Screw			
12	2			9897-1040-12	Skruv	Screw			
13	4			9739-1031-22	Mutter	Nut			
14	2			1134-9025-01	Linhjul- sats	Steering pulley- kit		Sats 2 st/kit of 2	
15	2			1134-0041-01	Linhjulshylsa	Bushing			
16	2			1134-3022-01	Linhållare	Cable holder			
17	2			9997-1030-16	Skruv	Screw			
18	2			9739-1031-22	Mutter	Nut			
19	1			1134-5349-01	Styrkonsol- gul	Steering console- yel			
20	4			9897-0820-16	Skruv	Screw			
21	4			9739-0831-22	Mutter	Nut			
22	1			1134-1305-05	Rattrör- nedre	Steering column- lower			
23	2			1134-1901-01	Lager	Bearing			
24	2			9893-0616-16	Skruv	Screw			
25	1			1134-2821-03	Rattstång	Steering rod			
26	1			1134-2837-01	Distans	Spacer			
27	1			1134-5496-01	Ratt	Steering wheel			

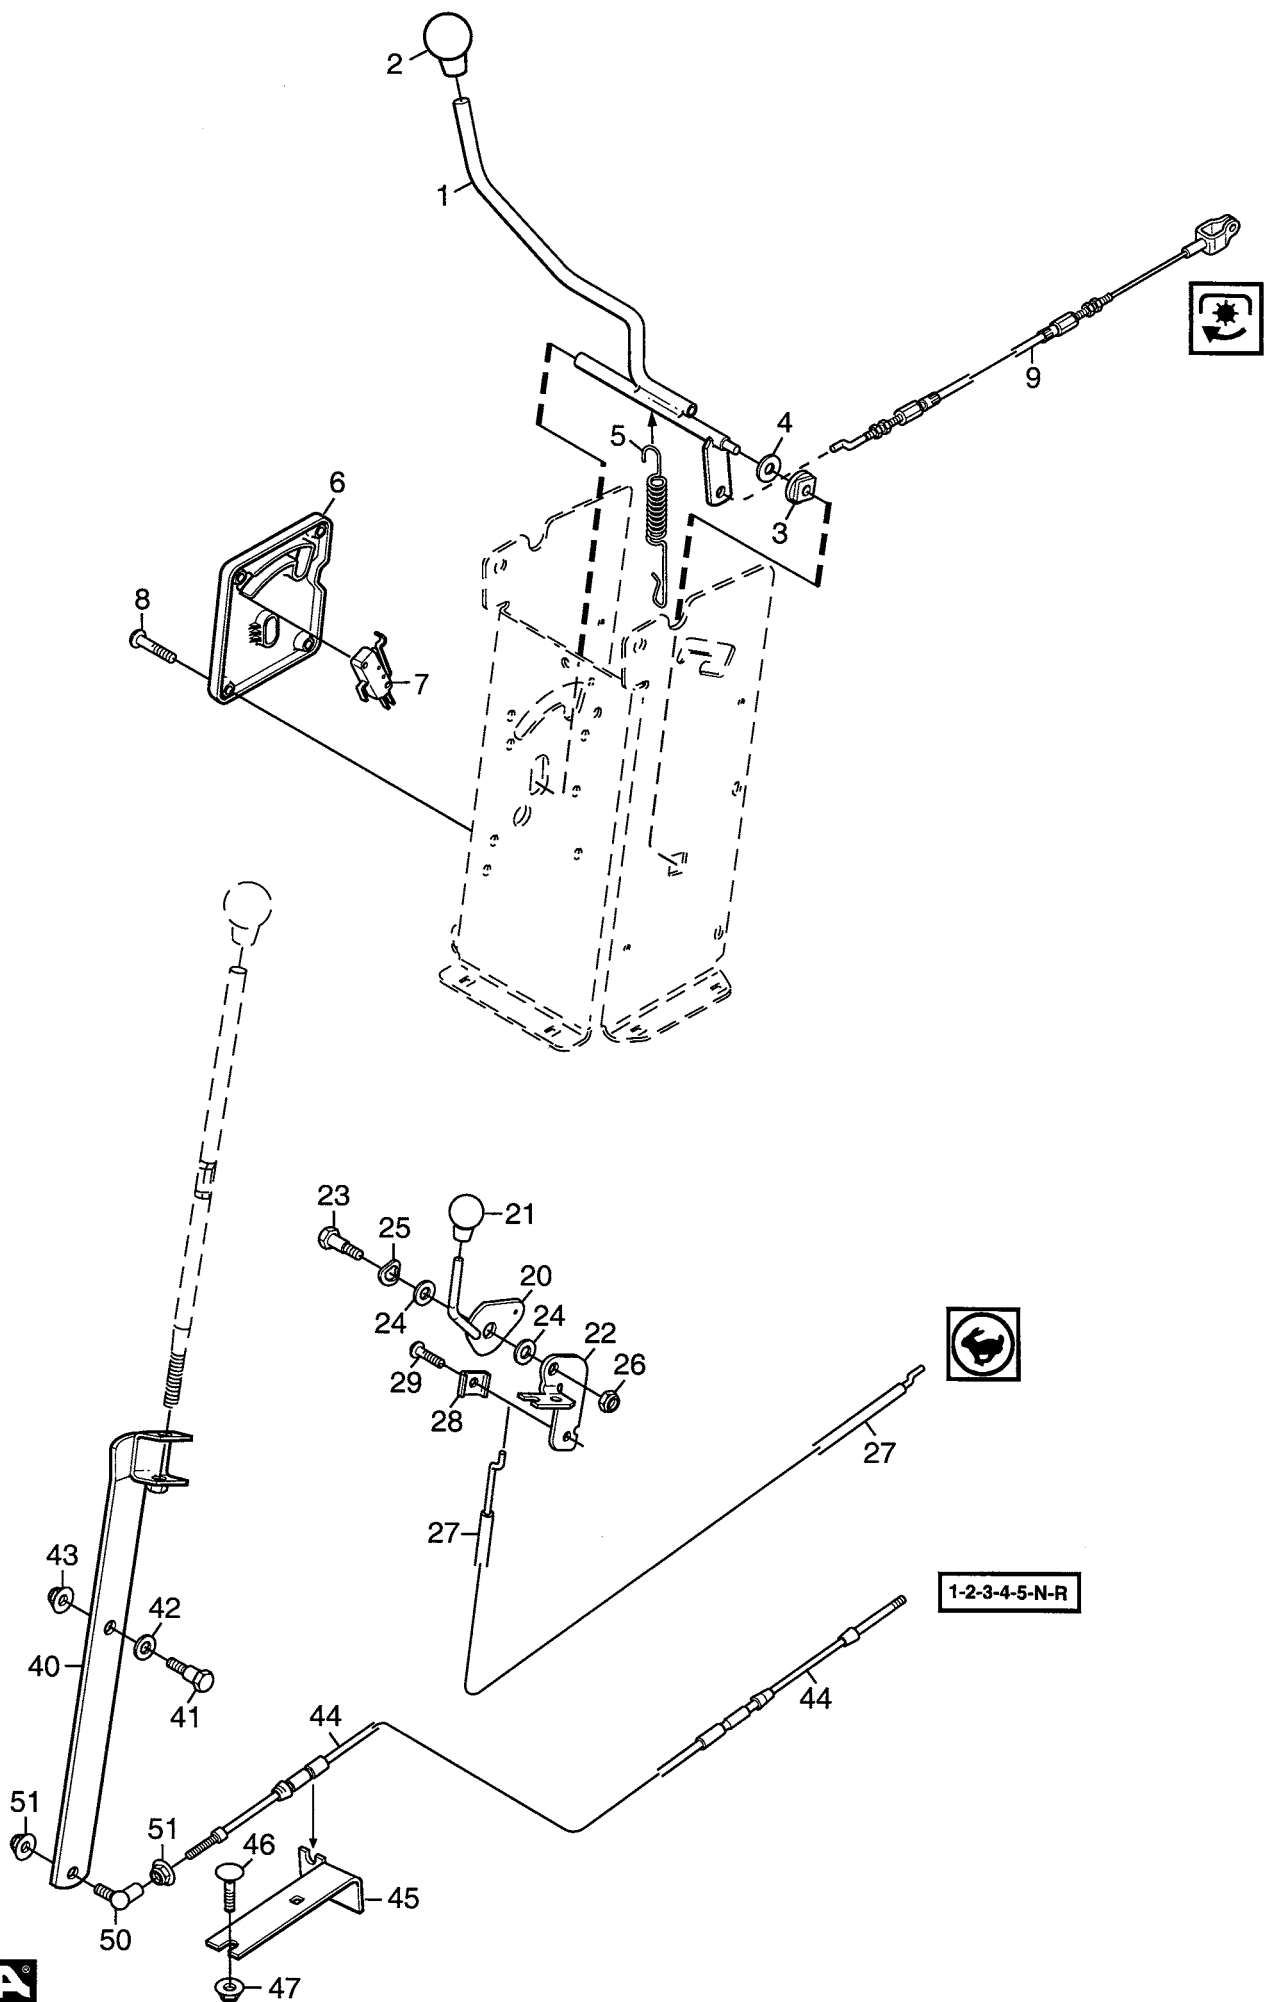





Utgåva Issue		Bildnr Picture No		PARK COMPACT HANDREGLAGE		PARK COMPACT HAND CONTROLS		Sida Page	
2005- 11		1670						14	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6101	6102 6103							
1	1	1			1134-5363-01	Aggregatspak.....	Control lever		
2	1	1			1134-2551-01	Reglageknopp.....	Knob		
3	1	1			1134-3790-02	Lager	Bearing.....		
4	1	1			9699-0090-02	Planbricka.....	Flat washer.....		
5	1	1			4231-0013-00	Fjäder.....	Spring		
6	1	1			1134-5368-01	Panel	Dashboard		
7	1	1			9400-0312-01	Mikrobrytare.....	Micro switch		
8	4	4			9946-0525-16	Skruv	Screw		
9	1	1			1134-3573-05	Reglagewire.....	Control cable.....		
20	1	1			1134-5465-01	Gasreglage.....	Throttle lever.....		
21	1	1			1134-4078-01	Knopp.....	Knob		
22	1	1			1134-5464-01	Fäste	Bracket		
23	1	1			1134-0240-00	Ansattsskruv.....	Shoulder screw		
24	2	2			1134-4242-01	Distansbricka.....	Spacer washer		
25	1	1			9694-0001-00	Fjäderbricka	Washer.....		
26	1	1			9747-0831-02	Mutter.....	Lock nut.....		
27	1	1			1134-4197-02	Gaswire	Throttle cable		
28	1	1			9500-9991-00	Wireklämma	Cable clamp		
29	1	1			9943-0516-16	Skruv	Screw		
40	1				1134-5459-01	Växelarm	Gear shift arm		
41	1				1134-0240-00	Ansattsskruv.....	Shoulder screw		
42	1				9696-0013-01	Kupad bricka.....	Bowed washer.....		
43	1				9739-0831-22	Mutter.....	Nut		
44	1				1134-2766-07	Reglagewire.....	Control cable.....		
45	1				1134-5518-01	Vinkelarm	Angle bracket		
46	2				9897-0616-16	Vagnsbult	Carriage bolt		
47	2				9739-0631-22	Mutter.....	Nut		
50	1				9570-0001-00	Vinkellänk	Elbow link		
51	2				9739-0531-22	Mutter.....	Nut		

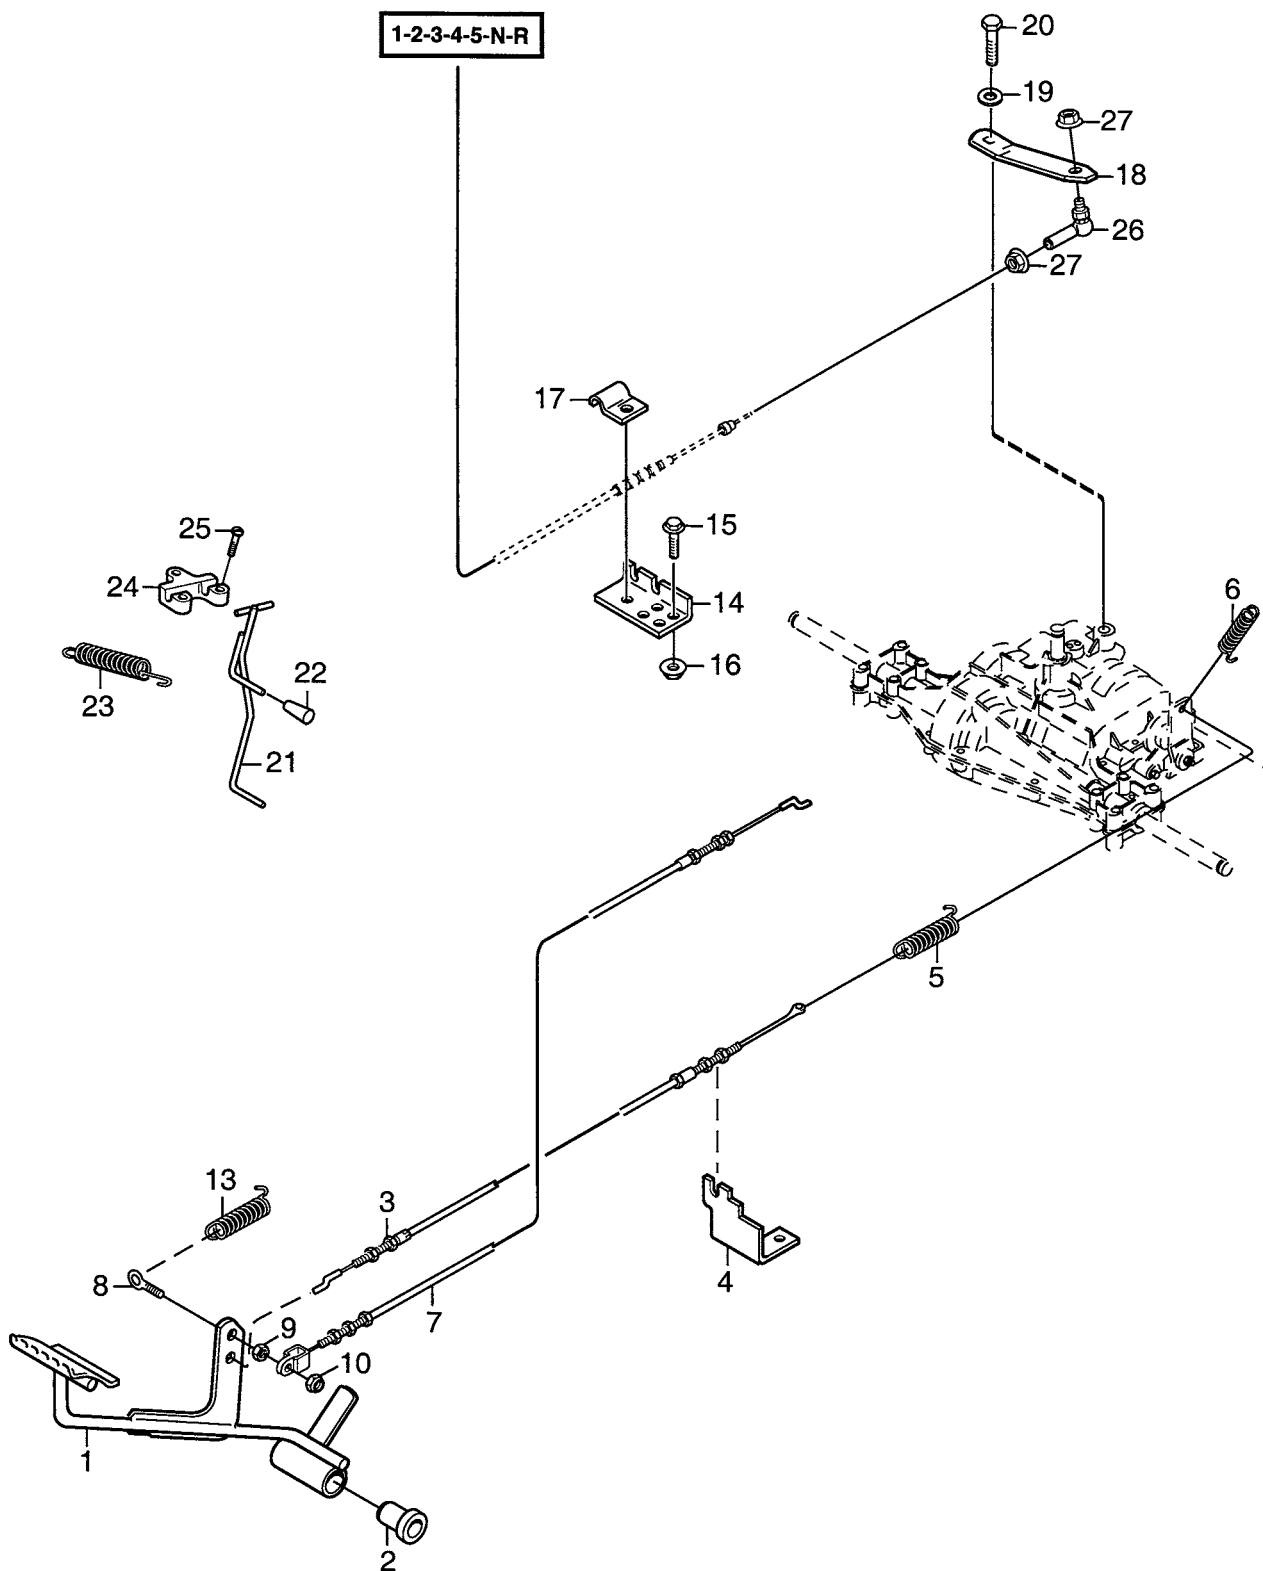




Utgåva Issue		Bildnr Picture No		PARK COMPACT FOTREGLAGE		PARK COMPACT FOOT CONTROLS		Sida Page	
2005- 11		1665						16	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6101								
1	1				1134-4247-01	Broms/kopplingspedal	Brake/clutch pedal		Sats 4 st/kit of 4
2	1				1134-9024-01	• Lager	• Bearing		
3	1				1134-3410-02	Bromswire	Brake cable		
4	1				1134-3403-01	Wirefäste	Wire holder		
5	1				1134-3280-01	Fjäder	Spring		
6	1				1134-3974-02	Fjäder	Spring		
7	1				1134-4058-01	Wire	Cable		
8	1				1134-2991-01	Skruvögla	Eye bolt		
9	1				9739-0531-22	Mutter	Nut		
10	1				9747-0531-02	Mutter	Nut		
13	1				1134-3974-01	Fjäder	Spring		
14	1				1134-3400-01	Vinkelarm	Angle plate		
15	2				9959-0816-16	Skruv	Screw		
16	2				9739-0831-22	Mutter	Nut		
17	1				1134-2021-01	Växelwirefäste	Clamp		
18	1				1134-4048-02	Växelarm	Gear shifter arm		
19	1				9699-0060-02	Planbricka	Flat washer		
20	1				9987-5016-16	Skruv	Screw		
21	1				1134-5353-01	Bromsstång	Brake rod		
22	1				1134-2786-01	Plastknopp	Plastic knob		
23	1				1131-1497-01	Fjäder	Spring		
24	1				1134-4002-01	Fäste	Brake rod attachment		
25	3				9838-9516-12	Skruv	Screw		
26	1				9570-0001-00	Vinkellänk	Elbow link		
27	2				9739-0531-22	Mutter	Nut		

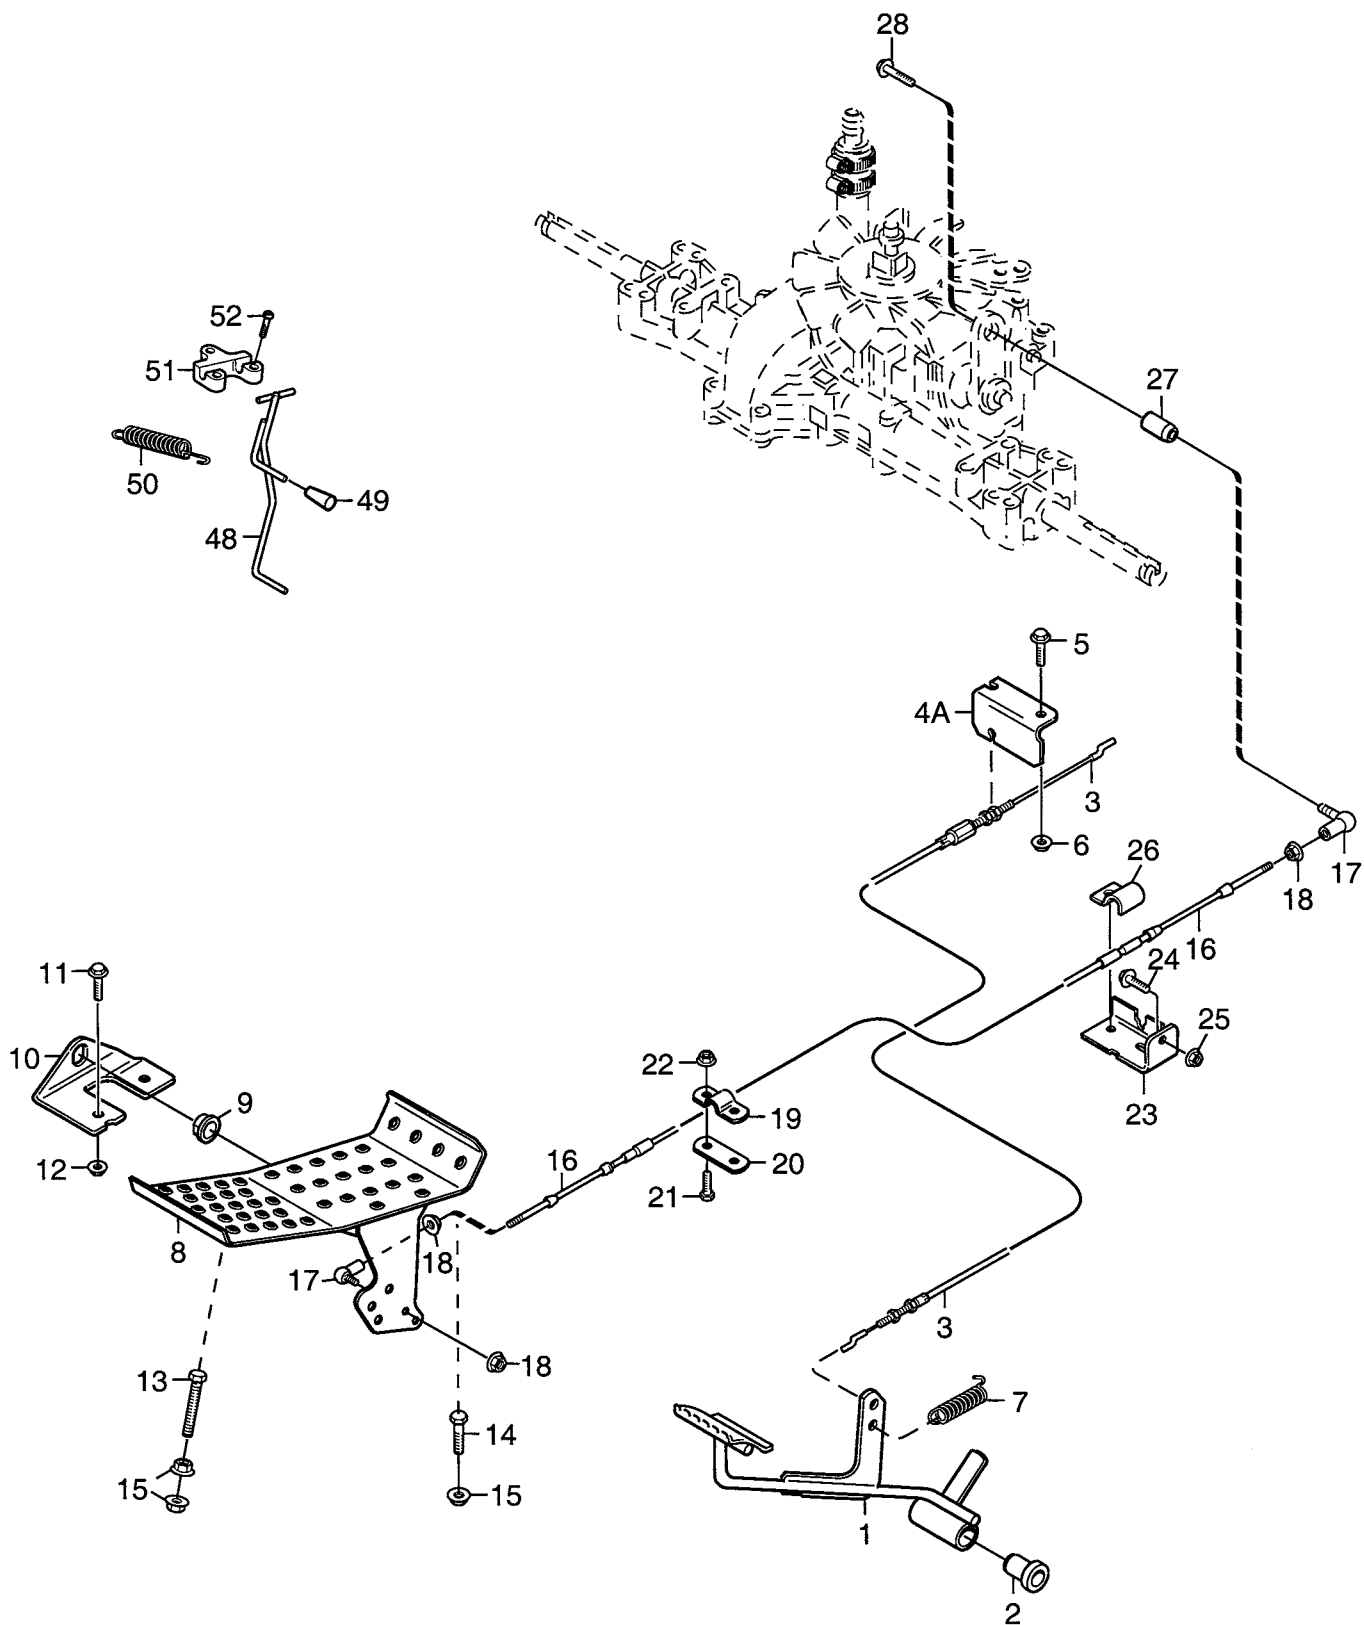

Utgåva Issue 2005- 11		Bildnr Picture No 1666		PARK COMPACT HST FOTREGLAGE		PARK COMPACT HST FOOT CONTROLS		Sida Page 18	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6102 6103								
1	1				1134-4247-01	Broms/kopplingspedal.....	Brake/clutch pedal.....		Sats 4 st/kit of 4
2	1				1134-9024-01	• Lager	• Bearing.....		
3	1				1134-3584-03	Broms/kopplingswire.....	Brake/clutch cable.....		
4A	1				1134-3906-01	Wirefäste	Cable holder		
5	2				9959-0816-16	Skruv	Screw		
6	2				9739-0831-22	Mutter.....	Nut		
7	1				1134-3974-01	Fjäder.....	Spring		
8	1				1134-4008-03	Drivpedal	Drive pedal		
9	2				1134-2780-01	Lager	Bearing.....		
10	2				1134-2700-01	Fäste	Bracket.....		
11	2				9959-0820-16	Skruv	Screw		
12	2				9739-0831-22	Mutter.....	Nut		
13	1				9997-0870-16	Skruv	Screw		
14	1				9959-0816-16	Skruv	Screw		
15	3				9739-0831-22	Mutter.....	Nut		
16	1				1134-2766-05	Reglagewire.....	Speed control cable		
17	2				9570-0001-00	Vinkellänk	Elbow link		
18	3				9739-0531-22	Mutter.....	Nut		
19	1				1134-0266-00	Fästbygel	Attaching clamp		
20	1				1134-0267-00	Underläggsbleck.....	Clamp plate		
21	2				9997-0520-16	Skruv	Screw		
22	2				9739-0531-22	Mutter.....	Nut		
23	1				1134-3395-01	Fäste	Attachment.....		
24	2				9959-0820-16	Skruv	Screw		
25	2				9739-0831-22	Mutter.....	Nut		
26	1				1134-2021-01	Växelwirefäste	Clamp.....		
27	1				1134-4013-01	Distans	Spacer.....		
28	1				9959-0820-16	Skruv	Screw		
48	1				1134-5353-01	Bromsstång	Brake rod		
49	1				1134-2786-01	Plastknopp.....	Plastic knob		
50	1				1131-1497-01	Fjäder.....	Spring		
51	1				1134-4002-01	Fäste	Brake rod attachment.....		
52	3				9838-9516-12	Skruv	Screw		

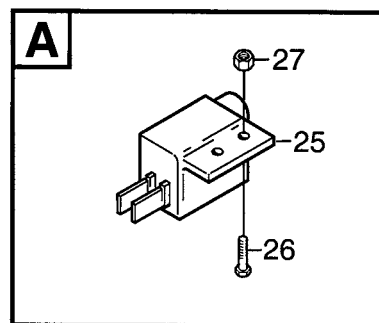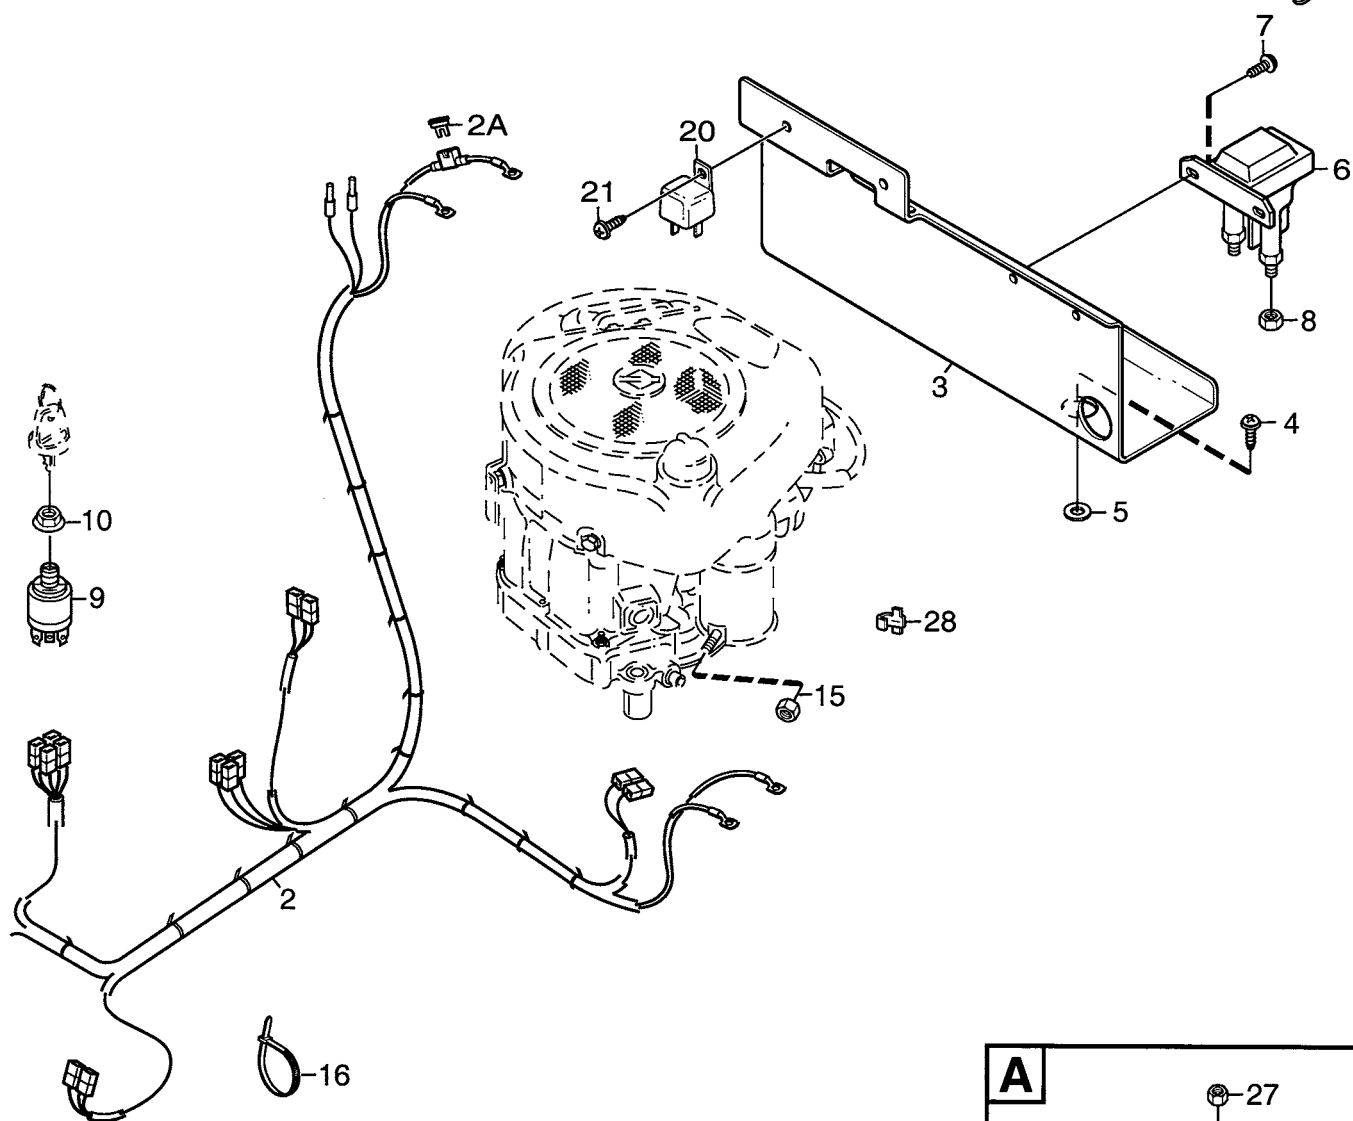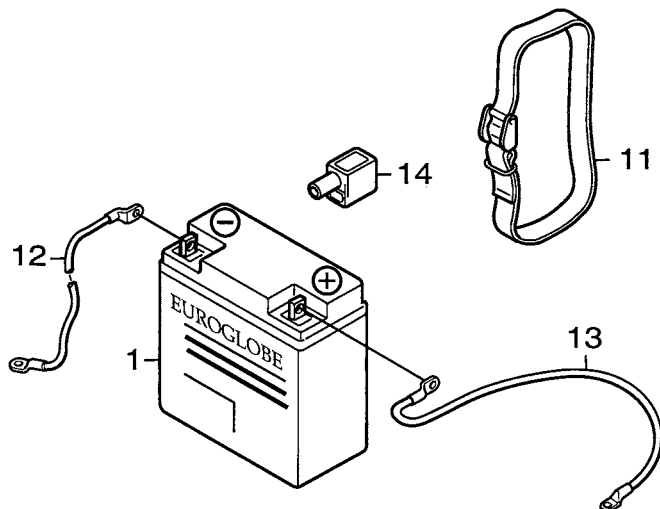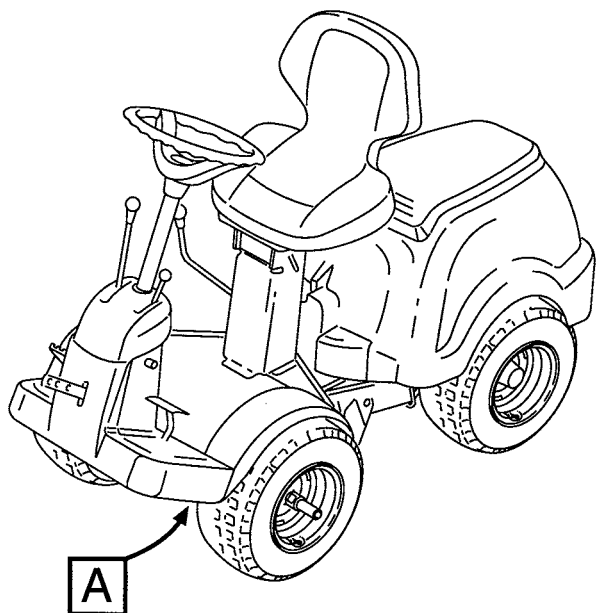


Utgåva Issue		Bildnr Picture No		PARK COMPACT ELUTRUSTNING		PARK COMPACT EL. EQUIPMENT		Sida Page	
2005- 11		1671						20	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6101	6102 6103							
1	1	1			1134-4804-01	Batteri	Battery	20A	
2	1				1134-5768-01	Kablage	Harness		
2		1			1134-5769-01	Kablage	Harness		
2A	1	1			1134-3496-06	• Säkring	• Fuse		
3	1	1			1134-5343-01	Batterikonsol	Battery bracket		
4	3	3			9852-8013-16	Skruv	Screw		
5	2	2			9699-0060-02	Planbricka	Flat washer		
6	1	1			1134-2962-01	Solenoid kpl	Solenoid assy		
7	2	2			9852-8013-16	Skruv	Screw		
8	2	2			9794-5131-02	• Mutter	• Nut		
9	1	1			1134-4093-01	Tändningslås	Ignition switch		
10	1	1			1134-4749-01	Mutter	Nut		
11	1	1			1134-5245-01	Batterirem	Battery strap		
12	1	1			1134-2167-01	Kabel	Cable		
13	1	1			1134-0234-02	Batterikabel (+)	Battery cable (+)		
14	1	1			1134-2310-01	Batteriskydd	Guard cap		
15	1	1			9795-3531-02	Mutter	Nut		
16	15	15			9579-0003-00	Buntband	Cable holder		
20	1				1134-2871-03	Relä	Relay		
21	1				9852-8013-16	Skruv	Screw		
25		1			1134-3399-02	Brytare	Switch		
26		2			9997-0520-16	Skruv	Screw		
27		2			9747-0531-02	Mutter	Nut		
28		1			9400-0231-00	Kabelskarv	Splicer		

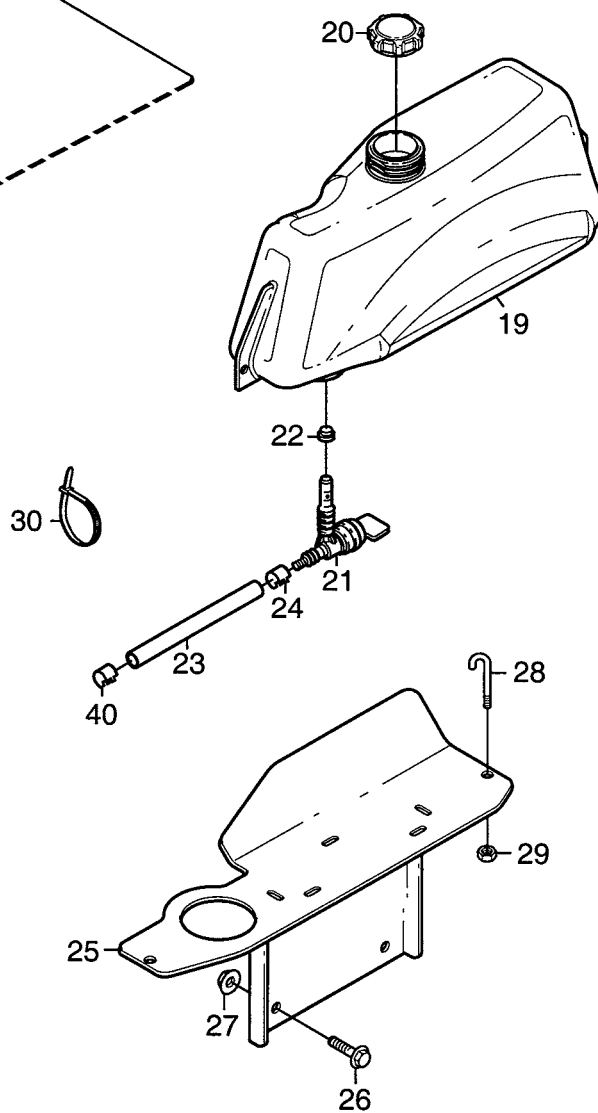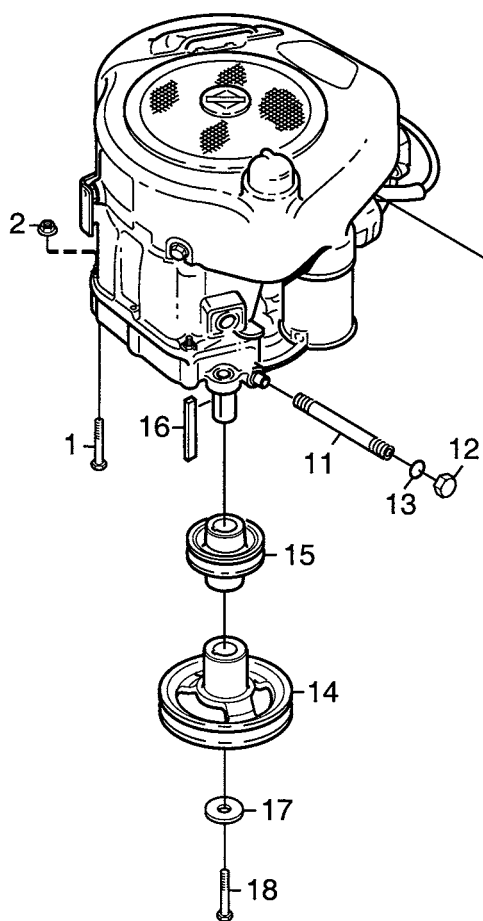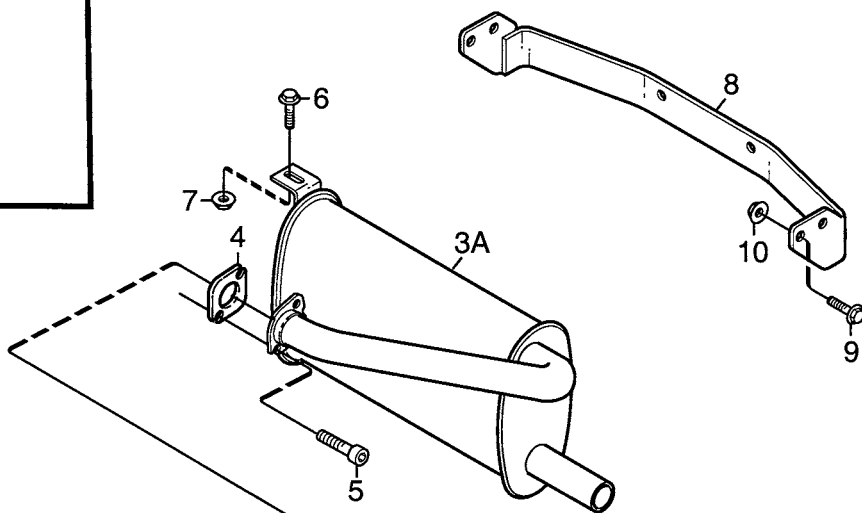


Utgåva Issue		Bildnr Picture No		PARK COMPACT MOTOR		PARK COMPACT ENGINE		Sida Page	
2005- 11		1672A						22	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6101	6102	6103						
1	3	4	4		9997-0840-16	Skruv	Screw		L = 40 mm L = 75 mm
1	1				9997-0875-12	Skruv	Screw		
2	4	4	4		9739-0831-22	Mutter.....	Nut		
3A	1	1			1134-5370-01	Ljuddämpare	Muffler		
3B			1		1134-5369-01	Ljuddämpare	Muffler		
4	1	1	1		1134-0433-00	Ljuddämparpackning	Muffler gasket		
5	2	2	2		1134-4930-01	Skruv	Screw		
6	1	1	1		9959-0820-16	Skruv	Screw		
7	1	1	1		9739-0831-22	Mutter.....	Nut		
8	1	1	1		1134-5390-01	Dragkroksbalk	Tow bar bracket.....		
9	4	4	4		9959-0820-16	Skruv	Screw		
10	4	4	4		9739-0831-22	Mutter.....	Nut		
11	1	1	1		1134-4978-01	Oljeavtappn.rör kpl	Oil drain pipe assy.....		
12	1	1	1		1134-4976-01	• Plugg	• Plug		
13	1	1	1		1134-4977-01	• Kopparbricka	• Copper washer		
14	1	1	1		1134-4999-01	Motorremskiva	Engine pulley.....		
15	1	1	1		1134-5000-01	Motorremskiva	Engine pulley.....		
16	1	1	1		9600-0251-01	Kil	Key		L = 2 1/2"
17	1	1	1		1134-5017-01	Bricka	Washer		
18	1	1	1		9987-5332-16	Skruv	Screw		
19	1	1	1		1134-4757-06	Bränsletank kpl	Fuel tank assy		Inkl. pos 20 - 24
20	1	1	1		1134-5532-01	• Tanklock	• Fuel tank cap		
21	1	1	1		1134-3224-01	• Bensinkran.....	• Fuel shut- off valve		
22	1	1	1		1134-3225-01	• Gummibussning	• Grommet.....		
23	1	1	1		1134-2975-01	• Bensinslang	• Fuel hose		L = 520 mm
24	1	1	1		9578-0023-02	• Slangklämma	• Hose clamp		
25	1	1	1		1134-5340-01	Tankkonsol	Fuel tank bracket.....		
26	2	2	2		9959-0820-16	Skruv	Screw		
27	2	2	2		9739-0831-22	Mutter.....	Nut		
28	2	2	2		1134-5346-01	Tankbygel	Fuel tank loop.....		
29	2	2	2		9747-0631-02	Låsmutter	Lock nut.....		
30	1	1	1		9579-0003-00	Buntband	Cable holder		
40	1	1	1		9578-0023-02	Slangklämma.....	Hose clamp		

X


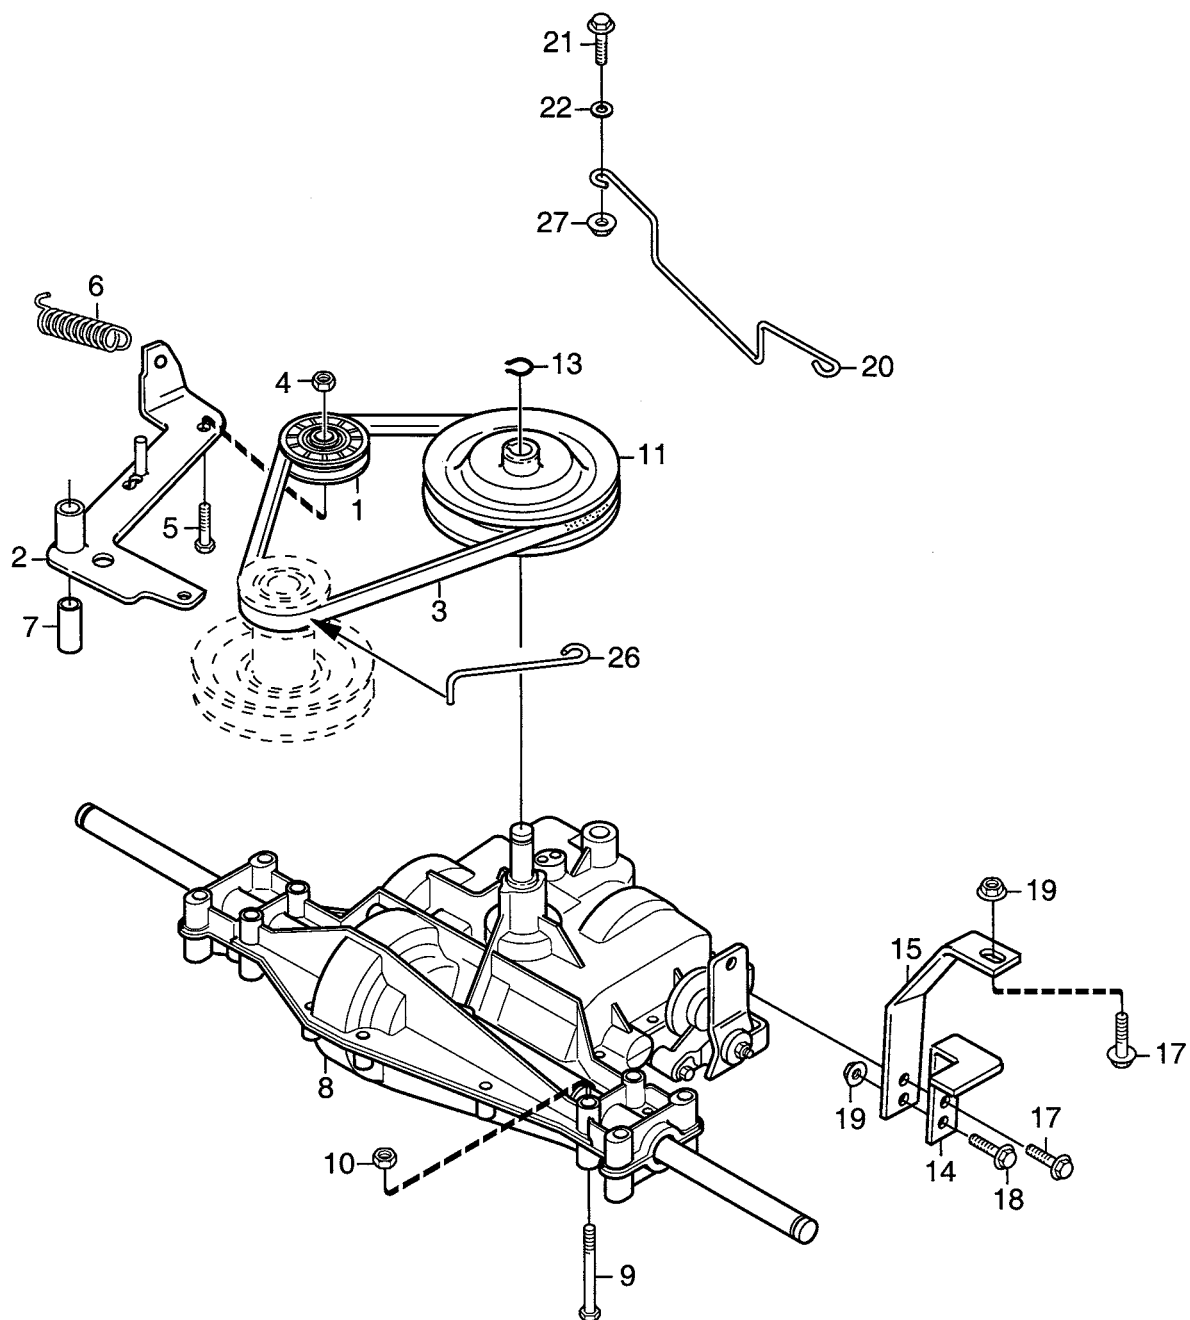


Utgåva Issue		Bildnr Picture No		PARK COMPACT TRANSMISSION		PARK COMPACT TRANSMISSION		Sida Page	
2005- 11		1667						24	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6101								
1	1				1134-9027-01	Spännrulle	Tension roller		= 9585-0057-00
2	1				1134-2015-04	Spännarm	Tension arm		
3	1				1134-9013-01	Drivrem	V- belt		
4	1				9799-1031-02	Mutter	Nut		
5	1				9997-1030-16	Skruv	Screw		
6	1				1134-4337-01	Dragfjäder	Spring		
7	1				1134-1565-01	Distans	Spacer		
8	1				1134-5282-01	Transaxel kpl.....	Transaxle assy		Dana 4360-198 L = 65 mm L = 70 mm
9	3				9997-0865-12	Skruv	Screw		
9	1				9997-0870-16	Skruv	Screw		
10	4				9747-0831-02	Mutter	Lock nut		
11	1				1134-3182-01	Remskiva.....	Belt pulley		
13	1				9650-0016-04	Spårring.....	Lock ring		
14	1				1134-2045-02	Bromsstopp	Brake stop		
15	1				1134-2986-01	Konsol	Bracket		
17	2				9942-0820-16	Skruv	Screw		
18	1				9959-0816-16	Skruv	Screw		
19	2				9739-0831-22	Mutter	Nut		
20	1				1134-5529-01	Remstyrning	Belt guide		
21	2				9959-0820-16	Skruv	Screw		
22	2				9699-0056-02	Planbricka.....	Flat washer		
26	1				1134-3289-02	Remstyrning	Belt guide		
27	2				9739-0831-22	Mutter	Nut		


X

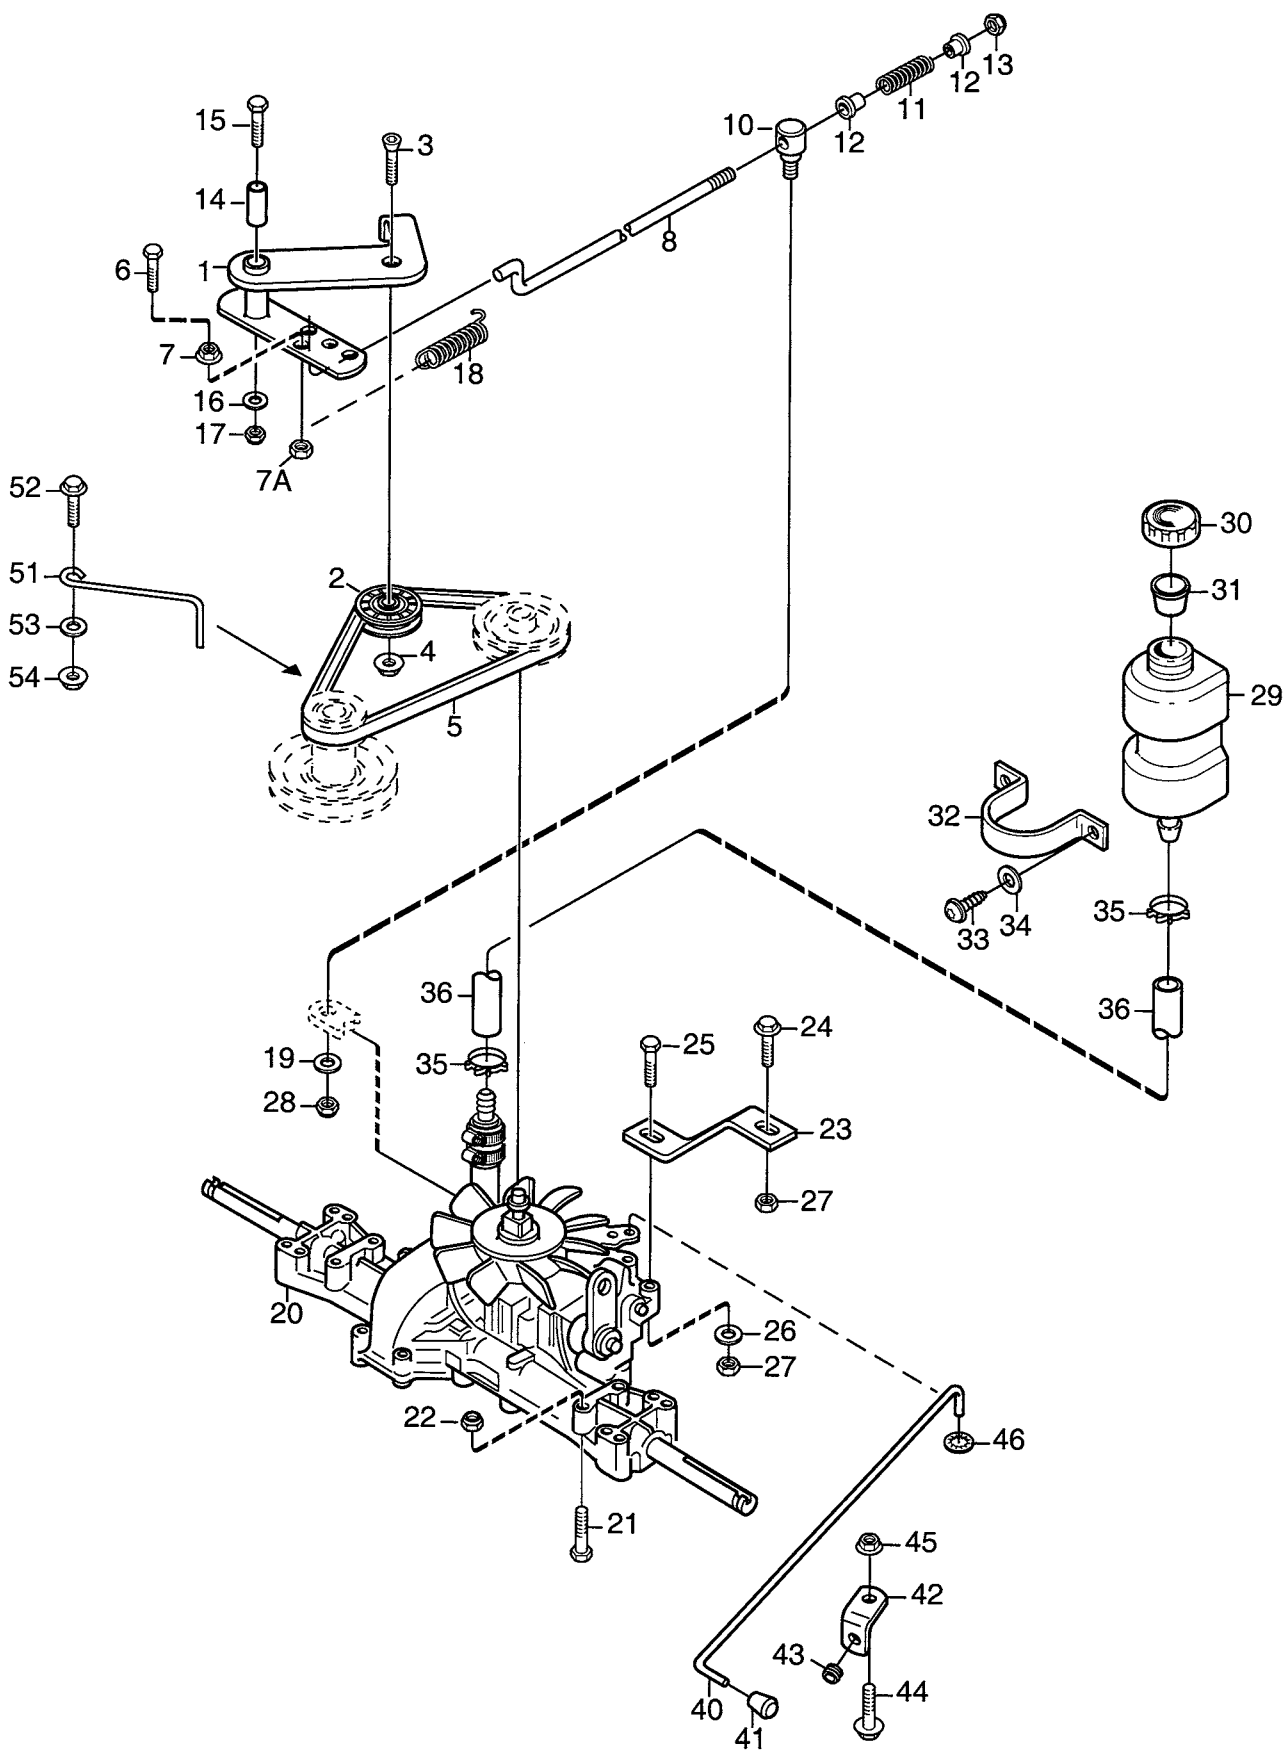

Utgåva Issue		Bildnr Picture No		PARK COMPACT HST TRANSMISSION		PARK COMPACT HST TRANSMISSION		Sida Page	
2005- 11		1668						26	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6102 6103								
1	1				1134-4000-02	Spännarm	Tension arm		= 9585-0091-01
2	1				1134-3459-01	Spännrulle	Tension roller		
3	1				9924-1035-16	Skruv	Screw		
4	1				9799-1031-02	Mutter	Nut		
5	1				1134-9058-01	Drivrem	V- belt		
6	1				9997-0625-16	Skruv	Screw		
7	1				9739-0631-22	Mutter	Nut		
7 A	1				9747-0631-02	Låsmutter	Lock nut		
8	1				1134-3377-02	Reglagestång	Control rod		
10	1				1134-4171-01	Ledtapp	Pivot pin		
11	1				1134-4183-01	Tryckfjäder	Compression spring		
12	2				1134-3456-01	Bussning	Bushing		
13	1				9747-0631-02	Låsmutter	Lock nut		
14	1				1134-1565-08	Distans	Spacer		
15	1				9997-0870-16	Skruv	Screw		
16	1				9699-0056-02	Planbricka	Flat washer		
17	1				9747-0831-02	Mutter	Lock nut		
18	1				1134-1949-01	Fjäder	Spring		
19	1				9699-0060-02	Planbricka	Flat washer		
20	1				1134-4848-01	Transaxel	Transaxle	Kanzaki K46G	
21	4				9997-0865-12	Skruv	Screw		
22	4				9747-0831-02	Mutter	Lock nut		
23	1				1134-3913-01	Reaktionsstag	Strut		
24	1				9959-0825-16	Skruv	Screw		
25	1				9997-0845-12	Skruv	Screw		
26	1				9699-0028-02	Planbricka	Flat washer		
27	2				9747-0831-02	Mutter	Lock nut		
28	1				9747-0631-02	Låsmutter	Lock nut		
29	1				1134-2765-02	Oljetank	Oil tank		
30	1				1134-2777-02	Tanklock	Filler cap		
31	1				1134-3734-01	Luftningsplugg	Vent plug		
32	1				1134-2778-01	Fästband	Retainer strap		
33	2				9852-8013-16	Skruv	Screw		
34	2				9699-0099-02	Bricka	Washer		
35	2				9578-0023-04	Slangklämma	Hose clamp		
36	1				1134-2779-07	Slang	Tube	L = 140 mm	
40	1				1134-4015-01	Dragstång	Pull rod		
41	1				1134-4014-01	Plastknopp	Plastic button		
42	1				1134-4713-01	Vinkel	Bracket		
43	1				1134-2790-01	Gummihylsa	Rubber grommet		
44	1				9959-0816-16	Skruv	Screw		
45	1				9739-0831-22	Mutter	Nut		
46	1				9675-0009-02	Starlock	Starlock		
51	1				1134-3289-02	Remstyrning	Belt guide		
52	1				9959-0820-16	Skruv	Screw		
53	1				9699-0056-02	Planbricka	Flat washer		
54	1				9739-0831-22	Mutter	Nut		

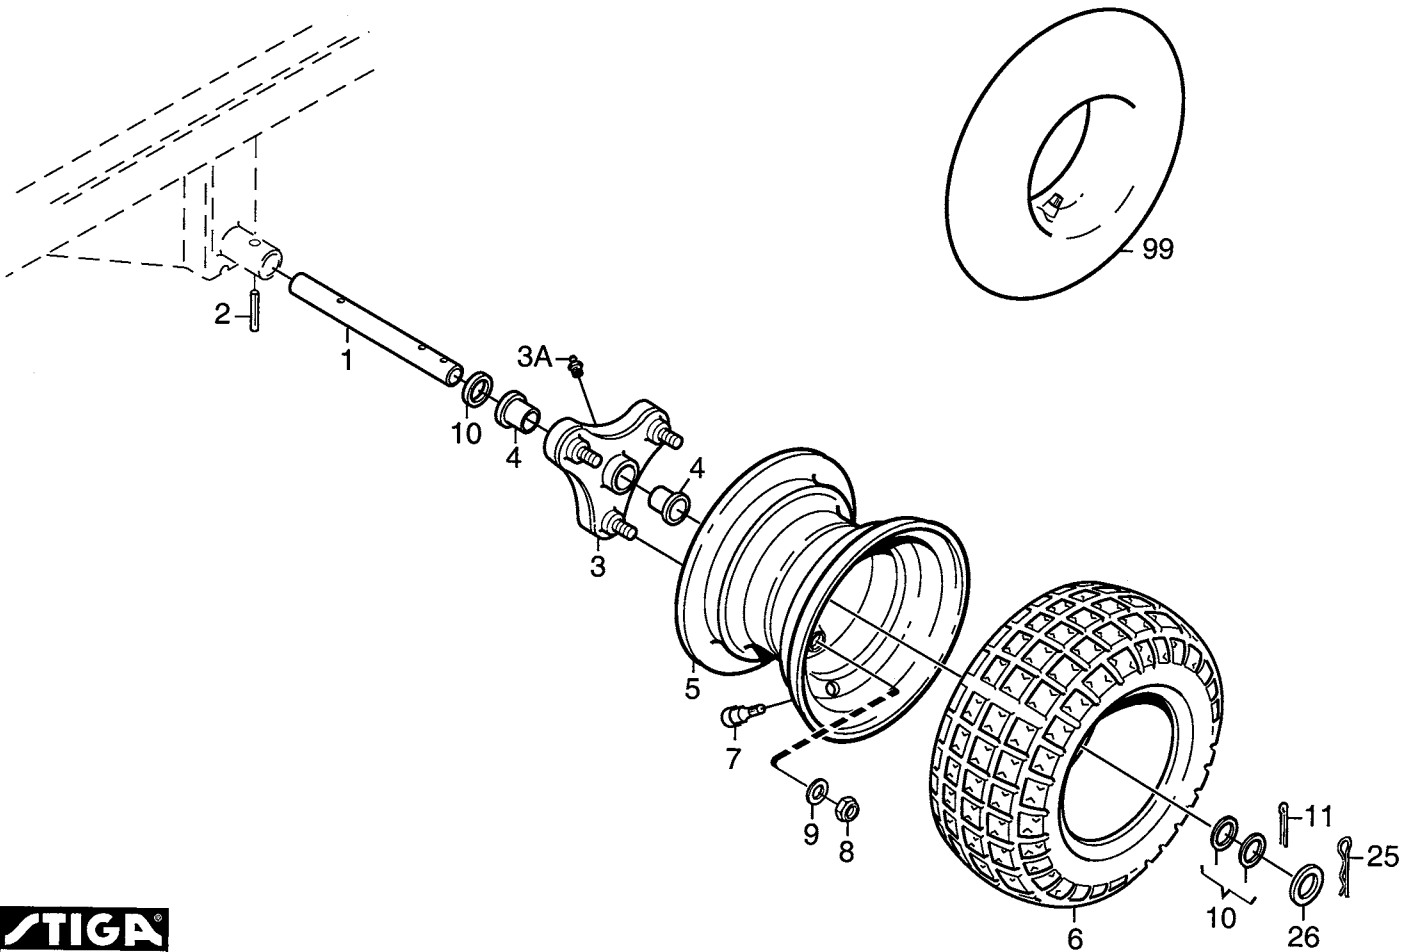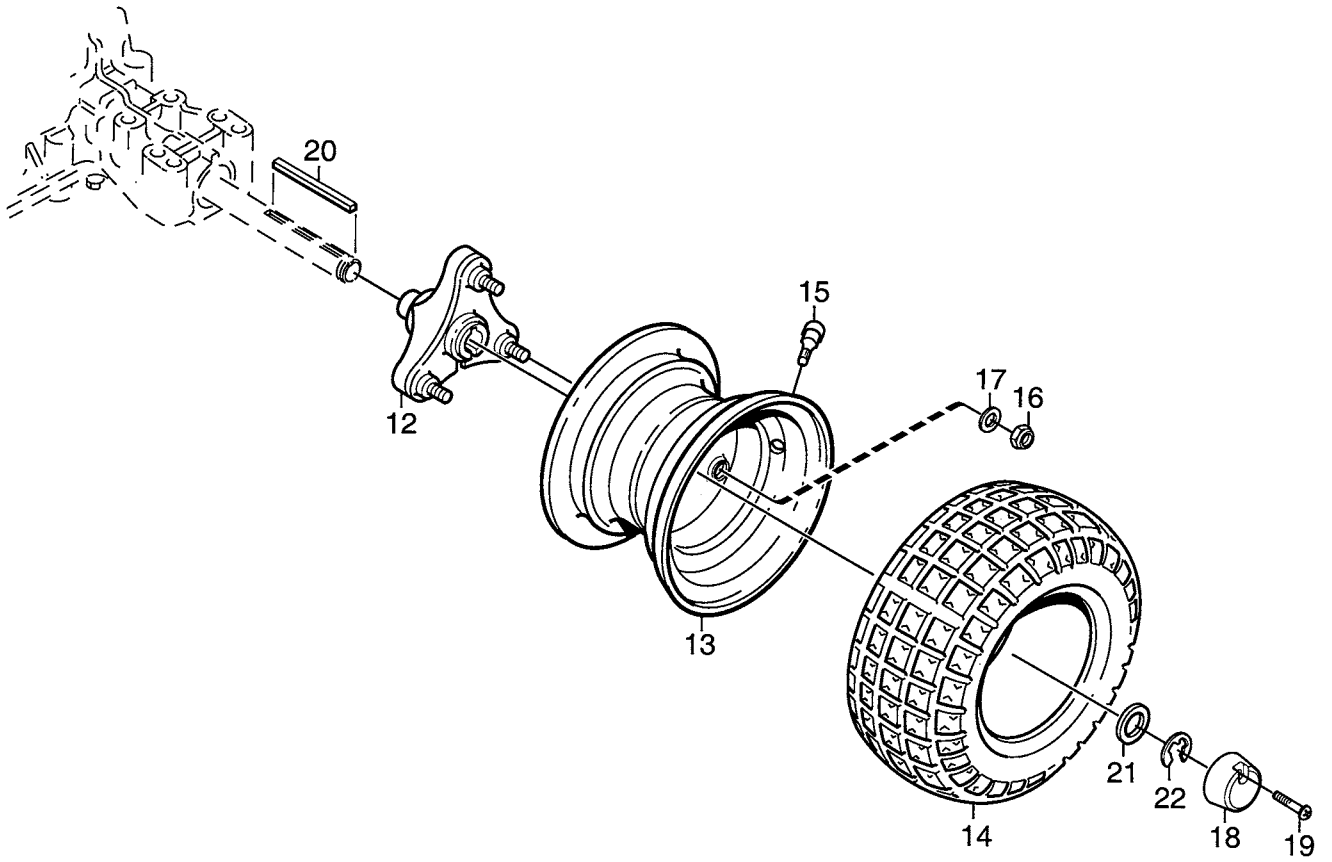

Utgåva Issue		Bildnr Picture No		PARK COMPACT HJUL		PARK COMPACT WHEELS		Sida Page	
2005- 11		1346A						28	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6101								
1	2				1134-0075-01	Framaxeltapp	Front axle		
2	2				9595-0258-00	Spännstift	Locating pin		
3	2				1134-4844-05	Hjulnav kpl.....	Wheel hub assy.....		
3A	1				9501-0500-00	• Smörjnippel.....	• Grease joint.....		
4	1				1134-9026-01	• Lagerbussning.....	• Bearing bush kit.....		Sats 4 st/kit of 4
5	2				1134-5255-01	Fälg	Rim		
6	2				9545-0126-01	Däck	Tyre		16 x 6.00 - 8
7	2				9545-0500-00	Ventil	Valve		
8	6				9747-1031-02	Låsmutter	Lock nut		
9	6				9699-0035-02	Planbricka.....	Flat washer.....		
10	8				1134-0341-01	Bricka	Washer.....		
11	2				9599-0080-02	Saxsprint	Cotter pin		
12	2				1134-4844-02	Hjulnav	Wheel hub		
13	2				1134-5255-01	Fälg	Rim		
14	2				9545-0126-01	Däck	Tyre		16 x 6.00 - 8
15	2				9545-0500-00	Ventil	Valve		
16	6				9747-1031-02	Låsmutter	Lock nut		
17	6				9699-0035-02	Planbricka.....	Flat washer.....		
18	2				1134-4796-01	Navkapsel	Hub cap.....		
19	2				9947-0540-19	Skruv	Screw		
20	2				1134-2471-01	Kil	Key		
21	2				9699-0042-02	Planbricka.....	Flat washer.....		
22	2				9653-0001-04	Spårryttare	Lock ring		
25	2				9598-0003-02	Låsnål.....	Spring pin		
26	2				9699-0042-02	Planbricka.....	Flat washer.....		
99					9545-0203-00	Innerslang	Inner tube		Reservdel/spare part

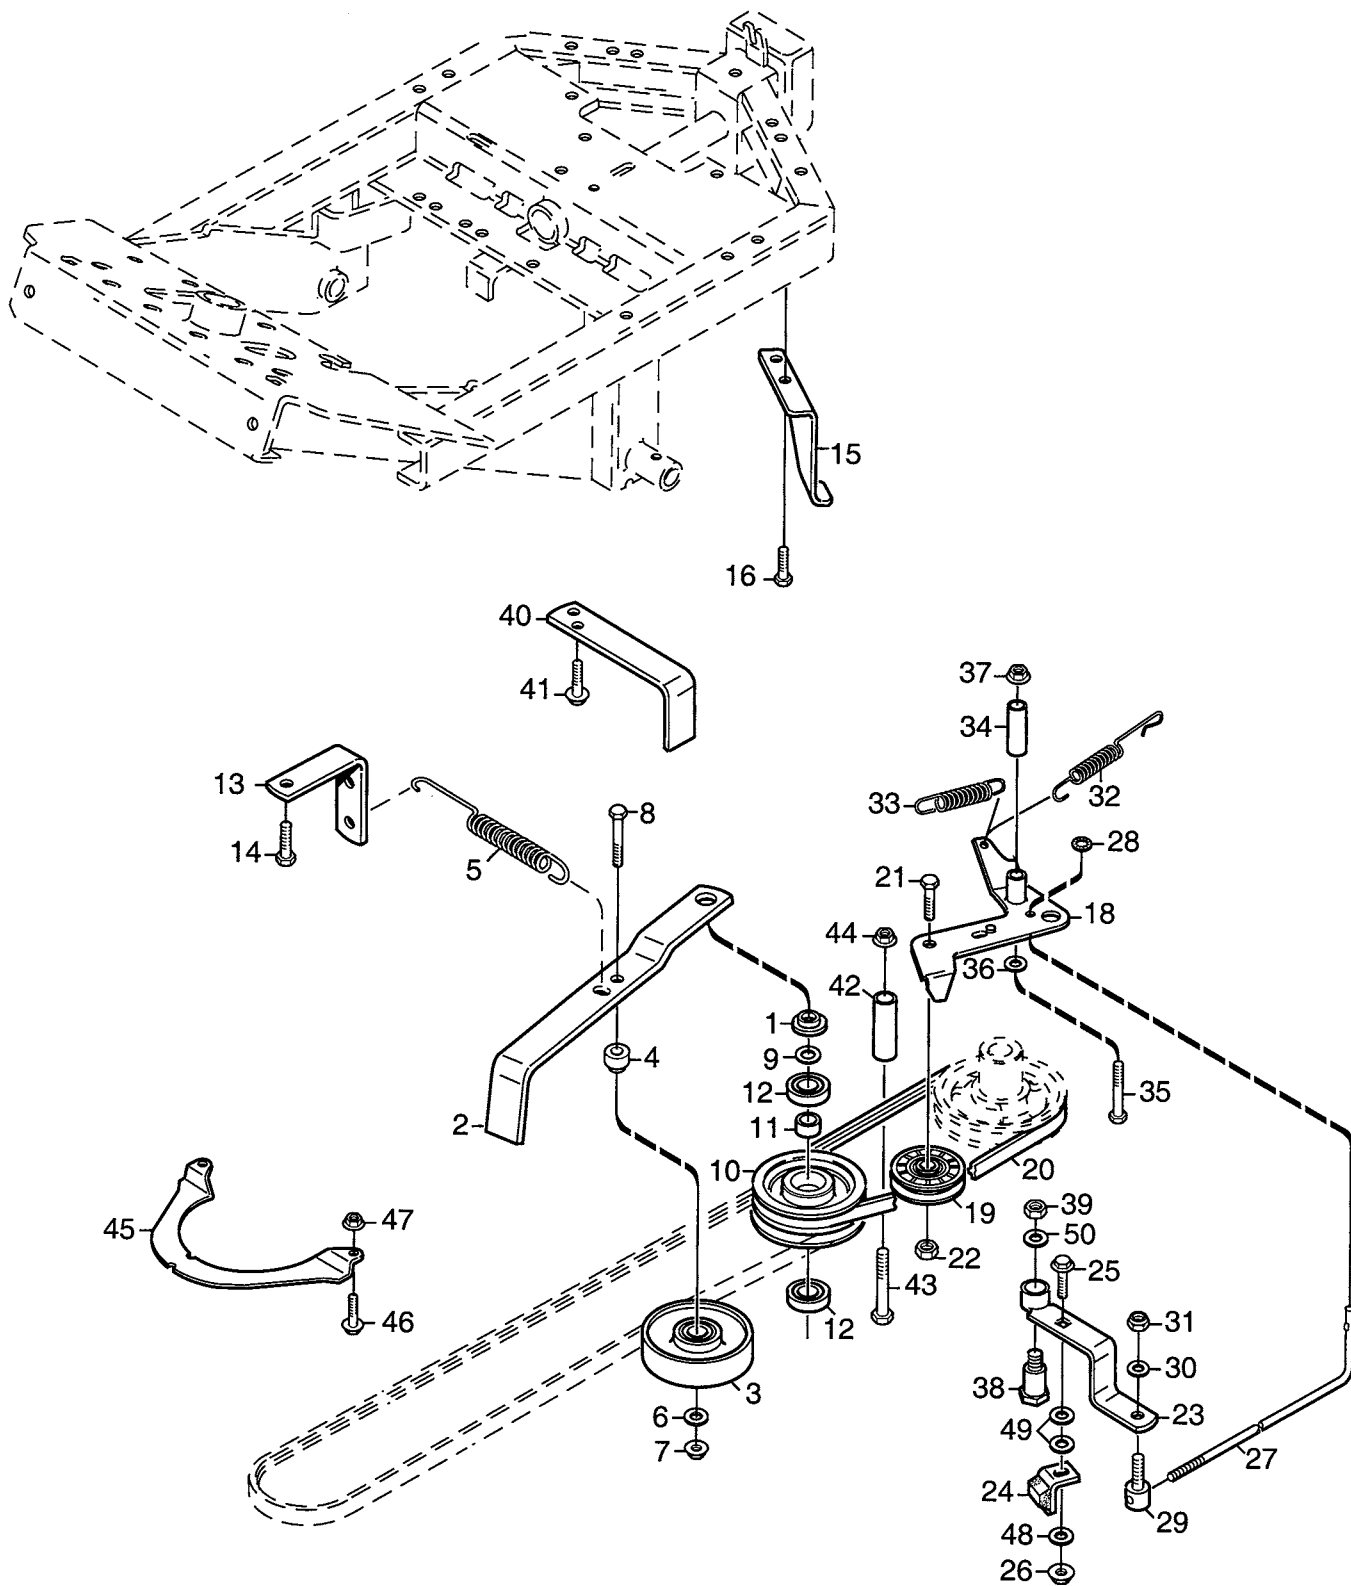

Utgåva Issue		Bildnr Picture No		PARK COMPACT KRAFTUTTAG		PARK COMPACT POWER TAKE- OFF		Sida Page	
2005- 11		1030F						30	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6101 6102 6103								
1	1				1134-5548-01	Distans	Spacer		- 050227
2	1				1134-5109-01	Spännhjulssarm	Tension wheel arm		
3	1				1134-1770-01	Spännrulle	Tension roller		
4	1				1134-1888-04	Distans	Spacer		
5	1				1134-5111-01	Fjäder	Spring		
6	1				9699-0056-02	Planbricka	Flat washer		
7	1				9739-0831-22	Mutter	Nut		
8	1				9997-0855-12	Skruv	Screw		
9	1				9695-0017-00	Shimsbricka	Shim washer		
10	1				1134-1769-02	Remskiva kpl	Belt pulley assy		
11	1				1134-0051-09	• Distans	• Spacer		
12	2				9549-0019-00	• Kullager	• Ball bearing		
13	1				1134-5112-01	Fjäderfäste	Spring attachment		
14	2				9945-0816-16	Skruv	Screw		
15	1				1134-5110-01	Hake	Hook		
16	2				9893-0616-16	Skruv	Screw		
18	1				1134-2018-02	Spännarm	Tension arm		
19	1				1134-9027-01	Spännrulle	Tension roller		
20	1				1134-9071-01	Drivrem	V- belt	= 9585-0129-01	
21	1				9997-1030-16	Skruv	Screw		
22	1				9799-1031-02	Mutter	Nut		
23	1				1134-4111-01	Bromsarm	Brake arm		
24	1				1134-4164-01	Bromsklots	Brake pad		
25	1				9897-0825-16	Skruv	Screw		
26	1				9747-0831-02	Mutter	Lock nut		
27	1				1134-4162-01	Bromsstång	Brake rod		
28	1				9675-0008-02	Starlock	Locking washer		
29	1				1134-4170-01	Nippel	Nipple		
30	1				9699-0025-02	Planbricka	Washer		
31	1				9747-0631-02	Låsmutter	Lock nut		
32	1				4231-0013-00	Fjäder	Spring		
33	1				1134-4231-01	Dragfjäder	Spring		
34	1				1134-1565-10	Distans	Spacer		
35	1				9997-0865-12	Skruv	Screw		
36	1				9699-0056-02	Planbricka	Flat washer		
37	1				9739-0831-22	Mutter	Nut		
38	1				1134-4163-01	Ansattsskruv	Shoulder bolt		
39	1				9747-1031-02	Låsmutter	Lock nut		
40	1				1134-3958-01	Remstyrning	Belt guide		
41	2				9893-0616-16	Skruv	Screw		
42	1				1134-0041-03	Hylsa	Collar		
43	1				9997-1070-12	Skruv	Screw		
44	1				9739-1031-22	Mutter	Nut		
45	1				1134-3654-01	Fingerskydd	Finger guard		
46	2				9959-0612-16	Skruv	Screw		
47	2				9739-0631-22	Mutter	Nut		
48	1				9699-0090-02	Planbricka	Flat washer		
49	2				9699-0035-02	Planbricka	Flat washer		
50	1				9699-0035-02	Planbricka	Flat washer		